



# HikCentral Professional

FAQ

## Contents

<b>Chapter 1 Installation</b> .....	<b>1</b>
1.1 What is Streaming Service? .....	1
1.2 Why can't I install Streaming Service with SYS on the same PC? .....	1
1.3 Why can't the HikCentral installation package run? .....	1
1.4 Why can't I run the system after I reinstalled it? .....	2
1.5 Why is the service status is exceptional in Service Manager? .....	2
1.6 Why does SYS service status keep switching between Starting and Stopped? .....	2
1.7 Can I run the Control Client on a virtual machine? .....	3
1.8 Failed to install the web control with prompt "NPF installation failed" .....	3
<b>Chapter 2 Login</b> .....	<b>5</b>
2.1 Why can't I enter the Web Client's login page? .....	5
2.2 Can I log into HikCentral with an IP address if it is configured with a domain name? .....	6
2.3 Can I use a proxy server via the web browser to access the system? .....	6
2.4 Failed to log into HikCentral with error "vsm.dll[7]" .....	7
2.5 Failed to log into HikCentral with prompt "Invalid token" .....	7
2.6 Failed to log into the Control Client with error code "VSM217" .....	7
<b>Chapter 3 Activation and Deactivation</b> .....	<b>9</b>
3.1 Failed to activate the system in online mode with error code "1103" .....	9
3.2 Failed to activate the system in offline mode with prompt "Operation timeout" .....	9
3.3 Failed to import response file when activating in offline mode (error code: 1105) .....	9
3.4 Failed to activate the system with error code "1108" .....	10
3.5 Failed to activate the system with error code "1113" .....	10
3.6 Failed to activate the system with error code "1114" .....	11
3.7 Failed to activate the system with error code "1116" .....	11
3.8 License failed to take effect after being activated .....	11
3.9 Why I cannot use the system after I deactivate the license of distributed deployment? ....	12

<b>Chapter 4 Device Management</b> .....	<b>13</b>
4.1 How many encoding devices and cameras can be added to HikCentral Professional? .....	13
4.2 Failed to configure device remotely via the Web Client .....	13
4.3 Which user name should I use when adding a Hybrid SAN? .....	13
4.4 Is the device's user name and password required when remote configuration? .....	14
4.5 Can I add an under vehicle surveillance system by domain name? .....	14
4.6 Why are part of the Open Network Video Interface cameras offline after being added to HikCentral ? .....	14
4.7 What HikCentral functions does a device added by Hikvision ISUP protocol not support? .....	15
4.8 Why can't I configure A4H and G4 series mobile devices via the Web Client? .....	16
4.9 Can I apply the time zone to the dock station from the platform? .....	16
4.10 Can all devices be added to the platform via IPv6? .....	16
4.11 The solar camera does not turn online after the platform is restarted. ....	16
<b>Chapter 5 Remote Site Management</b> .....	<b>17</b>
5.1 What is Remote Site Management (RSM)? .....	17
5.2 Can I add a HikCentral (with RSM) to another HikCentral as a Remote Site? .....	17
5.3 Can I add one HikCentral to another one if I have added it to one Central System? .....	17
5.4 Can I manage a Remote Site's cameras the same as the current site's cameras? .....	18
5.5 Can I store video files of Remote Site's camera in the Central System? .....	18
5.6 Why do my added Remote Sites turn to offline after switching transfer protocol? .....	18
5.7 Why can't I add one Remote Site to Central System? .....	19
5.8 Can I add a site which is distributed deployed to the Central System? .....	19
<b>Chapter 6 Recording Server Management</b> .....	<b>20</b>
6.1 How come the video files cannot be stored on the spare server when host server fails? ...	20
6.2 Why can't I search video files stored on the Recording Server? .....	20
6.3 Why can't I play the video exactly as I searched? .....	20
6.4 What HikCentral functions does a Cloud Storage Server not support? .....	20
6.5 What HikCentral functions does a Hybrid SAN not support? .....	21

6.6 What HikCentral functions does a pStor Cluster Service not support? .....	21
6.7 Why can't I adding a pStor or Cloud Storage Server to the system? .....	22
<b>Chapter 7 Event and Alarm .....</b>	<b>23</b>
7.1 How to add an alarm category and link a category to the alarm? .....	23
7.2 How to set audible warnings with custom voice text? .....	23
7.3 Can the Central System receive an alarm when testing the alarm on the Remote Site? .....	24
7.4 Why can't I configure fire source detection alarm for thermal camera? .....	25
7.5 Can I add an alarm of Person Amount More/Less than Threshold for resource groups on Remote Site? .....	25
7.6 Why does the alarm's voice prompt keep ringing when logging into the Control Client? ...	26
7.7 What can I do if there are too many alarms to be acknowledged in the Alarm Center? .....	26
7.8 Why my HikCentral cannot receive events, such as illegal parking, from traffic cameras? .....	27
7.9 Why the exported PDF file of alarm scheduled report contains garbage characters? .....	27
7.10 A lag occurred or no response when receiving events or alarms. ....	27
<b>Chapter 8 Person Management .....</b>	<b>28</b>
8.1 When getting persons from device, will the super card be synchronized to the system? ...	28
8.2 Why the new persons cannot be synchronized to the related access group? .....	28
8.3 Why can't I configure the person ID rules? .....	28
<b>Chapter 9 Face and Body Recognition .....</b>	<b>29</b>
9.1 Will the device trigger multiple alarms if it recognizes one person in multiple groups? .....	29
9.2 Failed to apply the face comparison group to DeepinMind series NVR .....	29
9.3 Why the detected face, which is not in any face comparison groups, is not displayed? .....	29
9.4 Why can't I set face capture events for normal cameras accessed via DeepinMind? .....	30
9.5 Why there is no camera available when applying face comparison groups to device? .....	30
9.6 Why can't I search the captured pictures on Edge Facial Recognition Server? .....	31
9.7 Can I set both facial and body recognition for one camera? .....	32
9.8 Why the human body recognition doesn't work after I set the recognition type of a capture camera as human body recognition? .....	32

<b>Chapter 10 Access Control and Elevator Control .....</b>	<b>33</b>
10.1 Why cards are still "To Be Applied" in Troubleshooting module even if I have successfully applied them to devices before? .....	33
10.2 Can I view the access event statistics from access control devices which were installed in different countries or regions? .....	33
10.3 Why can't I search some card-swiping events in access records? .....	33
10.4 Failed to copy the parameters configured for the door station to the MinMoe access control terminal .....	33
<b>Chapter 11 Time and Attendance .....</b>	<b>35</b>
11.1 Can I filter the attendance data by combined authentication mode? .....	35
11.2 Can I view the historical person information in the attendance records? .....	35
<b>Chapter 12 Security Control .....</b>	<b>36</b>
12.1 Why can't I add the AX Pro security control panel to the platform? .....	36
12.2 Why can't I relate a speed dome with the radar for calibration? .....	36
12.3 Why arming radar failed? .....	36
12.4 Can I control the siren of the wireless security control panel manually? .....	36
<b>Chapter 13 Entrance and Exit .....</b>	<b>37</b>
13.1 Can I search the records of vehicles entering or exiting parking lot within 3 months? .....	37
13.2 How to connect alarm input and relay to the barrier gate? .....	37
13.3 Why I cannot open the barrier gate manually? .....	37
13.4 Why the Control Client cannot receive the video intercom request from the entrance and exit? .....	38
13.5 Can I add the doors of the access control device which is already linked to a lane to an access level? .....	38
<b>Chapter 14 Smart Wall .....</b>	<b>40</b>
14.1 Why does error code 11116 occur when displaying live view on the smart wall? .....	40
14.2 Can I add DS-C10S to the system as a decoding device and link it to a smart wall? .....	40
14.3 Failed to add video wall controller (DS-C10S) to HikCentral .....	40
14.4 What smart wall functions does a DS-6400HDI-T not support? .....	41
14.5 How many roaming windows can be opened on one window? .....	41

## HikCentral Professional FAQ

---

14.6 Why the live view on smart wall fails but the playback is normal? .....	41
14.7 Can DS-1200KI and DS-1600KI keyboard log into HikCentral by domain name? .....	42
14.8 Why can't the DS-1600KI keyboard log into HikCentral? .....	42
14.9 Can I create a roaming window on the smart wall of graphic card? .....	42
14.10 I have changed the camera stream type, but it doesn't take effect. Why? .....	43
14.11 How to display my desktop on the smart wall? .....	43
14.12 Can I start playback in the alarm pop-up window? .....	44
14.13 Failed to open the window and set the window division, and received an error message with error code "951" .....	44
14.14 Why can't I set the roaming window division for the DS-C10S series decoding output? .....	44
14.15 Can I open 2 full-screen roaming windows for the DS-6900UDI series decoding output? .....	45
14.16 Why an error occurred when I opened a roaming window for BNC decoding output on the Control Client? .....	45
14.17 Failed to enlarge and restore the window and received an error message with the error code "23" .....	45
14.18 Why can't I drag the local signal source to other windows for use? .....	46
14.19 Failed to open the window and received an error message with the error code "29" ....	46
14.20 The local signal source has been connected, but its status is displayed as disconnected on the DS-6900UDI series decoder. Why? .....	46
14.21 Failed to display playback on the wall and failed to display live view on the wall by a network keyboard. ....	46
<b>Chapter 15 Map .....</b>	<b>47</b>
15.1 How many times can I add one camera as a hot spot on maps? .....	47
15.2 Why can't I view the GIS map on the Control Client? .....	47
15.3 Why can't I get any results when searching cameras in search field of GIS map? .....	47
<b>Chapter 16 Security .....</b>	<b>48</b>
16.1 How to set the minimum password strength? .....	48
16.2 How to reset another user account's password? .....	48

16.3 Can I change the password for an added third-party device? .....	48
<b>Chapter 17 Live View and Playback .....</b>	<b>49</b>
17.1 Failed to view live video via Google Chrome or Firefox browser .....	49
17.2 Why can't I access the live view and playback on the device remote configuration page? .....	49
17.3 Why is no POS information displayed during live view or playback? .....	49
17.4 What is the difference between Public View and Private View? .....	49
17.5 How to set a view group for view auto-switch? .....	50
17.6 Why there is no camera in area? .....	50
17.7 Why there is no alarm lamp appeared on the area icon when an alarm is triggered? .....	51
17.8 Why there is no temperature overlaid on the video footage recorded in visual tracking? .....	51
17.9 How to view alarm-triggered video files during playback? .....	51
17.10 How to view video files from the last 7 days? .....	52
17.11 Why is there no time period selection bracket when downloading video? .....	52
17.12 Why can't I play back the video files stored in the Hybrid SAN in reverse? .....	53
17.13 Why can't I view the camera's image thumbnails? .....	53
17.14 Why can't I enable fisheye expansion during live view or playback? .....	53
17.15 Why can't I view live video from a device on the LAN via Remote Configuration? .....	53
17.16 Can I add tags to the videos of Remote Site cameras? .....	54
17.17 No vehicles related pictures but succeeded to get the vehicles passing records .....	54
17.18 Failed to view live video in more than 4 windows with error code "SMS17" .....	54
17.19 Failed to view live video when the WAN access was enabled .....	55
17.20 Failed to view live video with error message "HCHetSDK4" .....	55
17.21 Failed to view live video with prompt "Runtime exception. Secret key error." .....	56
17.22 Failed to view live video or video is not fluent when hardware decoding enabled .....	56
17.23 Why can't I view the real-time access records on the Control Client? .....	57
17.24 Can I add a patrol or pattern for the camera added by Open Network Video Interface protocol? .....	57

17.25 Why image flicks or confusing layout occur during live view or playback on Firefox under Microsoft Windows 10? .....	57
17.26 Why can't I play back videos stored in the Recording Server via the Streaming Server? .....	58
17.27 Failed to encrypt stream during live view by android body camera. ....	58
<b>Chapter 18 Video Search .....</b>	<b>59</b>
18.1 Why can't I search and play back the motion detection's video footage? .....	59
18.2 Can I search POS transaction events on Remote Site cameras? .....	59
18.3 Failed to export CVS file .....	59
<b>Chapter 19 Downloading Video Files .....</b>	<b>60</b>
19.1 Failed to download video files when playing back with error prompt "SDK9" .....	60
19.2 The video has no image or audio after it is downloaded in AVI format .....	60
19.3 Why the time of video in VSPlayer is inconsistent with the downloading time? .....	60
<b>Chapter 20 Intelligent Analysis Report .....</b>	<b>62</b>
20.1 Failed to get BI report data and license plate information .....	62
20.2 Why can't I generate a report for the resources on the Remote Site? .....	62
20.3 Why can't I generate a temperature report of a thermal camera? .....	62
20.4 Can I search BI data occurred before the camera added to the system? .....	62
<b>Chapter 21 IP Speaker .....</b>	<b>64</b>
21.1 Can I add the IP speaker to the platform via domain name? .....	64
21.2 Why does a speaker unit pause for a while between playing two audio files during scheduled broadcast? .....	64
21.3 Why does the error code "10002" pop up when I am applying multiple audio files to a speaker unit for scheduled broadcast? .....	64
21.4 Can another person and I speak via the same speaker unit at the same time? .....	64
21.5 Why can't I upload audio files via Internet Explorer? .....	65
21.6 Can I adjust the volume of live broadcast via the platform? .....	65
21.7 Why can't I broadcast the WAV audio file via a speaker unit? .....	65
<b>Chapter 22 Security Inspection .....</b>	<b>66</b>



22.1 Can I access to a security inspection device installed in another country or region via the platform or the Client? .....	66
<b>Chapter 23 Upgrade .....</b>	<b>67</b>
23.1 After upgrading the platform, some historical data are missing. ....	67
23.2 Can customized software be upgraded to a new baseline version? .....	67
23.3 During the upgrade, a prompt shows notifying that SUP has expired. ....	67
23.4 How to upgrade a platform with a Rose hot spare? .....	67
23.5 How to upgrade the platform of versions earlier than V1.4 to V 2.x? .....	68
23.6 No enough disk space when upgrading the platform. ....	68
23.7 Some devices' do not work after upgrading the platform. ....	68
23.8 Will the pStor server be upgraded as well when upgrading HikCentral Platform? .....	68
<b>Chapter 24 Others .....</b>	<b>69</b>
24.1 Failed to import the HTTPS SSL certificate to the system .....	69
24.2 Why can't I view the password of the database via the Web Client? .....	69
24.3 Why can't I use the API of the new function after upgrading the platform? .....	70
24.4 Can my database use Rose hot spare in the dual-server deployment mode? .....	70

## Chapter 1 Installation

### 1.1 What is Streaming Service?

#### Question

What is the function of Streaming Service? Do I have to install it?

#### Answer

Streaming Service provides centralized forwarding of video and audio stream from device to clients.

When there are more than 200 cameras to be forwarded, you need to install the Streaming Service because the Streaming Gateway can serve for 200 cameras at maximum.

### 1.2 Why can't I install Streaming Service with SYS on the same PC?

#### Question

Why can't I install the Streaming Service together with the SYS service on the same PC or server?

#### Answer

SYS and Streaming Service can't be installed on the same PC or server because SYS service includes the Streaming Gateway which serves the same function as Streaming Service.

### 1.3 Why can't the HikCentral installation package run?

#### Question

Why can't the HikCentral installation package run?

#### Reason

This might be caused by the following two reasons:

- Reason 1: The total installation package (including service and Clients) is not running with administrator rights.
- Reason 2: The installation package is incomplete.

#### Solution

- For Reason 1: Run the total installation package (including service and Clients) as an administrator.
- For Reason 2: Make sure the installation package is complete and size is correct.

## 1.4 Why can't I run the system after I reinstalled it?

### Question

I cannot run the system after I reinstalled it. Why?

### Answer

You should reboot your PC or server if the installation wizard prompts you to do so after installing, uninstalling, or repairing the system. The system may not be able to run after you reinstall it again due to missing files.

## 1.5 Why is the service status is exceptional in Service Manager?

### Question

Why is there an exclamation mark shown beside the service name in Service Manager, with the port number is red and the status is Exceptional?

### Reason

The port has been occupied by other program in the server.

### Solution

Perform the following steps to solve this problem:

1. Find the process that occupied the corresponding port with the following method:  
Enter the cmd page, enter ***netstat -ano |findstr port number*** to find the PID of the process that occupied the port, and then enter ***tasklist |findstr PID number*** to find the related process name.
2. - If the process can be ended, end the process with customer's authorization. Then click **Restart All** on the Service Manager to restart the service.  
- If the process can not be ended, click the service name and edit a new port number in the pop-up window. All services will be restarted automatically after the modification.

---

### Note

If you modified the 80 and 443 ports, add the new port number after the IP address when you log into the Web Client, for example: <http://10.20.128.99:81>.

---

## 1.6 Why does SYS service status keep switching between Starting and Stopped?

### **Question**

Why does the status of SYS service keep switching between Starting and Stopped status in Service Manager?

### **Reason**

Reason 1: The SYS server's hardware has changed, causing the license detection failure and the SYS service starting failed.

Reason 2: The files under the directory of SYS have been damaged or lost.

Reason 3: The database does not work, or connecting to the database failed.

### **Solution**

For reason 1: Stop services in watchdog, and then delete the fnood folder in Disk C, finally start services and update license.

For reason 2: Please check the files under the directory of SYS. If they are damaged or lost, please contact out technical supports to repair or restore the files.

For reason 3: Check the database status.

## **1.7 Can I run the Control Client on a virtual machine?**

### **Question**

Can I run the Control Client on a virtual machine?

### **Answer**

No, you can't. The Control Client doesn't support running on virtual machine.

## **1.8 Failed to install the web control with prompt "NPF installation failed"**

### **Question**

I tried to install the web control, but failed and received an error message "NPF installation failed". Why?

### **Reason**

This might caused by the following two reasons:

- The previous web controls have not been uninstalled completely.
- Other programs in the system occupied NPF.

### **Solution**

- Make sure that the web controls that were previously installed are uninstalled completely.
- Quit NPF tools which use SADP (such as Wireshark, SADP, iVMS-4200, etc.). Then restart the computer.

## Chapter 2 Login

### 2.1 Why can't I enter the Web Client's login page?

#### Question

Why can't I enter the Web Client's login page?


#### Reason

If Internet Explorer's security level is too high, the HikCentral Professional Web Client's JavaScript is not allowed to be used by the browser and you cannot access the Web Client.

#### Solution

To fix this problem, you should add the HikCentral Professional's address to Internet Explorer's trusted sites list:

1. Open Internet Explorer's Internet Options and enter the **Security** tab.

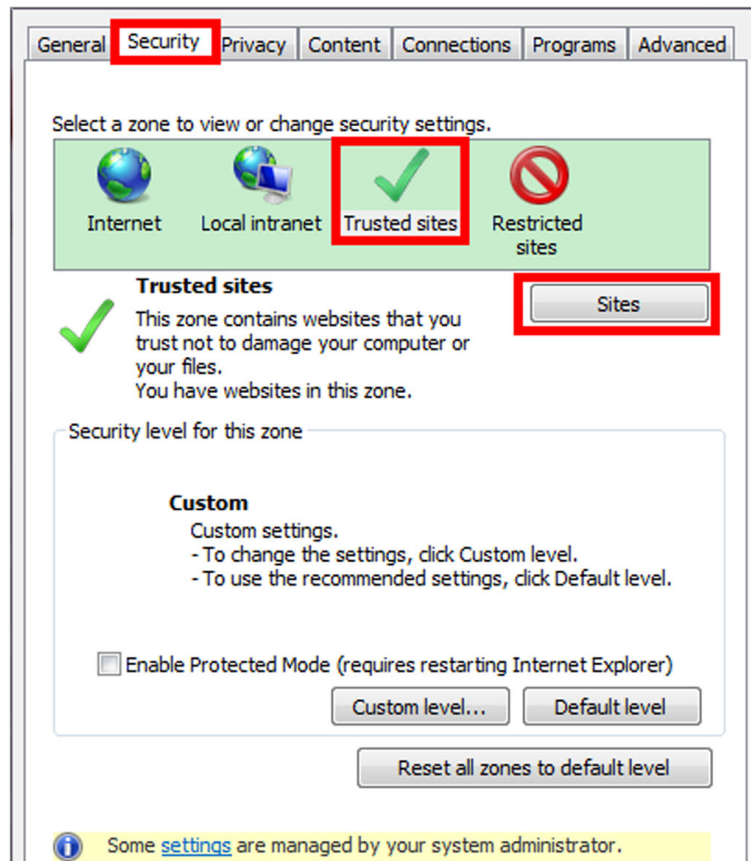

**Figure 2-1 Internet Options Window**

2. Click **Trusted sites** and click **Sites**.
3. Add the address to the Trusted sites list.

## 2.2 Can I log into HikCentral with an IP address if it is configured with a domain name?

### Question

Can I log into HikCentral with an IP address if it is configured with a domain name?

### Answer

No. If you have configured a domain name for HikCentral, you cannot log in with an IP address.

## 2.3 Can I use a proxy server via the web browser to access the system?

### Question

Can I use a proxy server via the web browser to access the system?

### Answer

No. The system doesn't support configuring a proxy server on the web browser to access HikCentral.

## 2.4 Failed to log into HikCentral with error "vsm.dll[7]"

### Question

In Rose redundancy mode, when the host SYS server switched to the spare SYS server, I failed to log into HikCentral and received an error message "vsm.dll[7]". Why?

### Reason

You have enabled the NGINX service on the host SYS server but not enabled it on the spare SYS server. Since the Rose Replicator does not supervise the NGINX service, the NGINX service on the spare SYS server cannot be started automatically, which causes the failure of login.

### Solution

When installing HikCentral in Rose redundancy mode, manually start the NGINX services both on the host SYS server and the spare SYS server.

## 2.5 Failed to log into HikCentral with prompt "Invalid token"

### Question

Failed to log into HikCentral and received a prompt "Invalid token". Why?

### Reason

The CPU model of the HikCentral server is not compatible, causing token encryption error.

### Solution

Change the HikCentral server's CPU to mainstream models such as Intel Core, Xeon.

## 2.6 Failed to log into the Control Client with error code "VSM217"

### Question

Failed to log into the Control Client and I received an error message with error code "VSM217". Why?



**Reason**

The Control Client version is inconsistent with the HikCentral SYS server.

**Solution**

Install the Control Client of the same version as the HikCentral SYS server.

## Chapter 3 Activation and Deactivation

### 3.1 Failed to activate the system in online mode with error code "1103"

#### Question

I tried to activate the system in online mode, but failed and received an error message with error code "1103". Why?

#### Reason

This might be caused by the following two reasons:

- Reason 1: The HikCentral SYS server could not connect to the license server.
- Reason 2: The license server is not available currently.

#### Solution

- For Reason 1: Make sure the HikCentral SYS server can connect to Internet when activating in online mode.
- For Reason 2: Try online activation later.
- Try offline activation later.

### 3.2 Failed to activate the system in offline mode with prompt "Operation timeout"

#### Question

I tried to activate the system in offline mode, but failed and received a message "Operation timeout". Why?

#### Answer

The activation in offline mode will fail if the time offset between the SYS server's time and the standard time is more than 24 hours.

You should change the SYS server's time to the standard time.

### 3.3 Failed to import response file when activating in offline mode (error code: 1105)

### Question

I tried to import the response file to HikCentral when activating it in offline mode, but failed and received an error message with error code "1105" and prompt "Operation is out of sequence. Restart the operation". Why?

### Reason

The imported response file does not match with the exported request file. It might be caused by the following two reasons:

- Reason 1: The activation is not completed within 24 hours after the request file exported from HikCentral.
- Reason 2: You clicked repeatedly when exporting request file from HikCentral, which caused the first request file invalid.

### Solution

- For Reason 1: After you export the request file from HikCentral, please upload it to Hikvision Official Website to get the response file within 24 hours and import it to HikCentral for activation.
- For Reason 2: Do not click "Export the license request file" repeatedly when exporting the request file from HikCentral.

## 3.4 Failed to activate the system with error code "1108"

### Question

I tried to activate the system, but failed and received an error message with error code "1108". Why?

### Reason

This might be caused by the following two reasons:

- Reason 1: The license's activation code has been used by other HikCentral SYS server.
- Reason 2: The license version does not match with the current HikCentral version.

### Solution

- For Reason 1: Deactivate the SYS server that has used the activation code, and then activate the license on the new SYS server. If you can't find which server has used the license, please contact our technical support.
- For Reason 2: Check whether the license version matches with the current system version. If not, please apply for a new license.

## 3.5 Failed to activate the system with error code "1113"

### **Question**

I tried to activate the system, but failed and received an error message with error code "1113". Why?

### **Reason**

You activated the expansion license without a base license.

### **Solution**

Apply a base license and activate it first.

## **3.6 Failed to activate the system with error code "1114"**

### **Question**

I tried to activate the system, but failed and received an error message with error code "1114". Why?

### **Reason**

HikCentral SYS server time has been modified.

### **Solution**

Modify the server time as correct time.

## **3.7 Failed to activate the system with error code "1116"**

### **Question**

I tried to activate the system, but failed and received an error message with error code "1116". Why?

### **Reason**

The number of resources in the current system exceeded the license limit.

### **Solution**

Apply license according to the current number of resources.

## **3.8 License failed to take effect after being activated**

### **Question**

I activated the system successfully, but the license didn't take effect and it couldn't be found in the Web Client's license list. Why?

### **Reason**

When both sale license and trial license exist in HikCentral, only sale license will take effect since its priority is higher than trial license. As a result, the trial license will not take effect and couldn't be found in the license list.

### **Solution**

Confirm the type of license in current HikCentral is a sale license or a trial license, to ensure that the license can be used normally.

## **3.9 Why I cannot use the system after I deactivate the license of distributed deployment?**

### **Question**

My HikCentral Professional is activated by License of server distributed deployment. After I deactivate this license, I cannot use all the functions of the system. Why?

### **Answer**

If the system is activated by License of server distributed deployment, it cannot be switched to centralized deployment anymore unless you uninstall the whole system and install again.

## Chapter 4 Device Management

### 4.1 How many encoding devices and cameras can be added to HikCentral Professional?

#### Question

How many encoding devices and cameras can I add to one HikCentral Professional?

#### Answer

- Up to 1,024 encoding devices and 10,000 cameras can be added to one site.
- For one Central System (one site with Remote Site Management function and other Remote Sites), up to 100,000 cameras can be imported from Remote Sites and managed in the Central System.

### 4.2 Failed to configure device remotely via the Web Client

#### Question

Why can't I configure the device remotely via the Web Client after adding a third-party encoding device to HikCentral?

#### Answer

- Check whether the device and the system are in the same domain. The device and system should be in the same domain.
- Check whether the device supports web configuration. Remote configuration is only supported by devices which supports web configuration.
- Check the web browser type and version. We recommend using IE10 or IE11 to log in to the Web Client.

### 4.3 Which user name should I use when adding a Hybrid SAN?

#### Question

Which user name and password should I use when I add a Hybrid SAN to HikCentral?

#### Answer

Add Hybrid SANs to HikCentral via the admin account. When the password of nvr\_admin user is manually changed, the password of admin user will also be changed to the same one.

## **4.4 Is the device's user name and password required when remote configuration?**

### **Question**

When I perform remote configuration on the Web Client, some devices require a user name and password for login while others do not. Why?

### **Answer**

For devices with the following firmware versions and web versions, you are not required to input the device's user name and password for remote configuration.

- Camera: Firmware Version V5.1.7 or above; Web Version V3.1.3.140508 or above.
- NVR: Firmware Version V3.0.13 or above; Web Version V3.0.4.150306 or above.
- DVR: Firmware Version V3.1.6 or above; Web Version V3.0.2.150509 or above.
- Encoder: Web Version V3.0.2.150509 or above.

## **4.5 Can I add an under vehicle surveillance system by domain name?**

### **Question**

Can I add an under vehicle surveillance system to HikCentral by domain name?

### **Answer**

No. Adding under vehicle surveillance system by domain name is not supported.

## **4.6 Why are part of the Open Network Video Interface cameras offline after being added to HikCentral ?**

### **Question**

After I added Open Network Video Interface cameras to HikCentral, part of them were offline but could be viewed by ODM tool. Why?

### **Reason**

HikCentral uses the default port 80 to access the Open Network Video Interface devices, but some cameras' port might be 8000. The port inconsistency caused cameras' offline.

### **Solution**

Perform the following steps:

- Check the cameras' port number in the **Device service address** of ODM tool.
- If the cameras' port number is 8000, edit the cameras' port number to 8000 in the Physical View of HikCentral.

### 4.7 What HikCentral functions does a device added by Hikvision ISUP protocol not support?

#### Question

What HikCentral functions does a device added by Hikvision ISUP protocol not support?

#### Answer

The following functions are NOT supported by the devices added by Hikvision ISUP protocols:

1. Recording Settings:
  - Scheduled uploading
  - Storage on encoding device and stream type is dual-stream
2. Live View and Playback
  - Image thumbnails on the camera list
  - Manual capture
  - Visual tracking
  - Two-way audio
  - Image thumbnails on the timeline
  - Frame-extracting playback
  - Transcoding playback
  - Live view and playback in low bandwidth, smooth stream
  - Locking video footage
  - Live view of channel-zero
  - Daylight saving time
  - Searching video footage of ATM events
  - Searching video footage of transaction events
  - Live view and playback via Web Client without web control installed
  - Live view and playback in low bandwidth is not supported after ISUP is enabled on the device, event though the device is added to the system by Hikvision private protocol.
  - Stream encryption.
3. Event and Alarm
  - Capture pictures as event and alarm linkage actions
  - Displaying alarm related picture
  - People queuing-up alarm
  - Temperature alarm and temperature difference alarm
4. People Counting
5. Heat Analysis
6. Queue Analysis



## **4.8 Why can't I configure A4H and G4 series mobile devices via the Web Client?**

### **Question**

Why can't I configure A4H and G4 series mobile devices via the Web Client?

### **Answer**

For A4H and G4 series mobile devices, configuring parameters of via the Web Client is not supported.

## **4.9 Can I apply the time zone to the dock station from the platform?**

### **Question**

Can I apply the time zone to the dock station from the platform?

### **Answer**

No. You cannot apply the time zone to the dock station from the platform running in Microsoft Windows, or get the time zone from the dock station.

## **4.10 Can all devices be added to the platform via IPv6?**

### **Question**

Can all devices be added to the platform via IPv6?

### **Answer**

No. Only encoding devices and face recognition terminals (DS-K1T673TDWX) are supported, and these devices should access to the platform via Hikvision private protocol.

## **4.11 The solar camera does not turn online after the platform is restarted.**

### **Question**

The solar camera does not turn online after the platform is restarted.

### **Reason**

After restarting the platform, the solar camera will turn offline, so that the camera will turn asleep. The time of turning online depends, but no more than 30 minutes are needed.

## Chapter 5 Remote Site Management

### 5.1 What is Remote Site Management (RSM)?

#### Question

What is Remote Site Management (RSM)?

#### Answer

You can add other HikCentral System without an RSM module to a HikCentral system with an RSM module (Central System) as Remote Site.

After adding a Remote Site to the platform, you can manage the Remote Site's cameras (such as live view and playback) and add the Remote Site's configured alarms so that you can manage the alarms via the Central System. You can also set the recording schedule for the Remote Sites' cameras and store the recorded video files in the Central System's Recording Server.

### 5.2 Can I add a HikCentral (with RSM) to another HikCentral as a Remote Site?

#### Question

Can I add a HikCentral (with RSM) to another HikCentral (with RSM) as a Remote Site?

#### Answer

No. You can only add HikCentral (without RSM) to the HikCentral (with RSM) as a Remote Site.

### 5.3 Can I add one HikCentral to another one if I have added it to one Central System?

#### Question

If I have already added one HikCentral (without RSM) to the HikCentral (with RSM) as a Remote Site, can I add it to other HikCentral (with RSM)?

#### Answer

No. One HikCentral (without RSM) can only be added to one HikCentral (with RSM) for central management.

## 5.4 Can I manage a Remote Site's cameras the same as the current site's cameras?

### Question

After importing the Remote Sites' cameras to areas in Central System (site with RSM), can I manage these cameras just the same as the current site's cameras?

### Answer

No. For the cameras imported from Remote Sites, the following functions are NOT supported in a Central System:

Configuration:

- Storing recorded video file in encoding device locally when configuring recording. You can only store the video files in a Hybrid SAN or a Cloud Storage Server.
- Setting Remote Sites' cameras as related cameras when configuring alarms.
- Adding Remote Sites' cameras as hot spots on maps.

Operation:

- Two-way audio during live view.
- Adding tags to the video, locking video, and red triangle-mark on calendar during playback.
- Searching transaction events, ATM events by inputting card numbers in Video Search module.
- Displaying signal status in Health Monitoring module.

## 5.5 Can I store video files of Remote Site's camera in the Central System?

### Question

Why can't I configure to store video files of a Remote Site's camera in the Central System's Hybrid SAN or Cloud Storage Server?

### Answer

For the Remote Sites added to the Central System by domain name or Remote Sites registered to the Central System, HikCentral cannot store their cameras' video files in the Central System's Hybrid SAN or Cloud Storage Server.

## 5.6 Why do my added Remote Sites turn to offline after switching transfer protocol?

### Question

Why do my added Remote Sites turn to offline after I switch the transfer protocol of the system (with RSM) to HTTPS?

### **Answer**

If you switch the transfer protocol to HTTPS for any sites (Remote Sites or site with RSM) in the Central System, you should enable other sites' transfer protocols to HTTPS as well.

## **5.7 Why can't I add one Remote Site to Central System?**

### **Question**

The version of the Central System with Remote Site Management function is 1.4 and above. Can I add a Remote Site the version of which is below 1.4 to this Central System?

### **Answer**

No. The Remote site (version below 1.4) cannot be managed in the Central System (version 1.4 and above).

## **5.8 Can I add a site which is distributed deployed to the Central System?**

### **Question**

Can I add a site which is distributed deployed to the Central System as a Remote Site?

### **Answer**

No, the system with distributed deployment cannot be added as a Remote Site.

## Chapter 6 Recording Server Management

### 6.1 How come the video files cannot be stored on the spare server when host server fails?

#### Question

I have added two Hybrid SANs as Recording Server and built an N+1 hot spare system. When the host server fails, how come the video files cannot be stored on the spare server?

#### Answer

Currently, the Hybrid SANs in the N+1 hot spare system should be in the same firmware version.

### 6.2 Why can't I search video files stored on the Recording Server?

#### Question

I have configured WAN access for HikCentral, but I still cannot search the video files stored in the Recording Server via the Control Client on the WAN. Why?

#### Answer

If the Recording Server is deployed on the LAN, you should enable its **WAN Access** function before you want to access it via WAN.

### 6.3 Why can't I play the video exactly as I searched?

#### Question

When I play back the video files stored on the Cloud Storage Server, it cannot play the video I searched. Why?

#### Answer

HikCentral doesn't support different time zones between the added Cloud Storage Server and the client (Web Client, Control Client, and Mobile Client). If the Cloud Storage Server and the clients are in different time zones, it cannot play the videos exactly as you searched.

### 6.4 What HikCentral functions does a Cloud Storage Server not support?

### Question

Are there any functions in HikCentral Professional that a Cloud Storage Server doesn't support as a Recording Server?

### Answer

Yes. The following functions are not supported by Cloud Storage Server:

- Storing video files of a 360° panoramic camera.
- VCA playback of video files stored in a Cloud Storage Server.
- Getting the Cloud Storage Server's recording status.
- Storing video files of devices added by domain name and devices added by Hik-Connect.
- Storing video files forwarded via Streaming Server added by domain name.
- Reverse playback (H.264+ and H.265+ stream). This function is not supported by pStor either.

## 6.5 What HikCentral functions does a Hybrid SAN not support?

### Question

Are there any functions in HikCentral that a Hybrid SAN doesn't support as a Recording Server?

### Answer

Yes. The following functions are not supported by Hybrid SAN:

- Storing video files of devices added by domain name and devices added by Hik-Connect.
- Storing video files forwarded via a Streaming Server added by domain name.
- Reverse playback of stored video files in H.264+, H.265, and H.265+ encoding formats.

## 6.6 What HikCentral functions does a pStor Cluster Service not support?

### Question

What HikCentral functions does a pStor Cluster Service not support?

### Answer

- Frame-extracting playback
- Thumbnail
- Motion detection recording
- Video search by time range and segment
- Video playback on the Web Client, accessing by iOS web browser
- Set stream type of video copyback (main stream by default).

---

 **Note**

- The pStor Cluster Service cannot be installed on the same server with Application Data Server.
  - The port 3306 cannot be occupied.
  - The pStor Cluster Service, pStors, and SYS server should be in the same network domain.
  - The pStor Cluster Service, pStors, devices, and clients should be in the same time zone.
  - Only pStors of version 1.4 and later can connect to the pStor Cluster Service.
- 

### **6.7 Why can't I adding a pStor or Cloud Storage Server to the system?**

#### **Question**

Can I add a pStor (version 1.2) or a Cloud Storage Server (version 2.0) to the system (version 1.4 and above)?

#### **Answer**

No. HikCentral Professional (version 1.4 and above) only supports pStor (version 1.3 and above) and Cloud Storage Server (version 2.2.4, 3.0.5 and above).

## Chapter 7 Event and Alarm

### 7.1 How to add an alarm category and link a category to the alarm?

#### Question

How do I add alarm categories and link the added categories to the alarms?

#### Answer

Perform the following steps to add an alarm category:

1. Enter the HikCentral Web Client.
2. Click **Event & Alarm** → **Alarm** → **Alarm Settings** to enter the alarm settings page.
3. Click **Add** on the Alarm Category field and add the customized alarm category.
4. Select a number for the alarm category.



Up to 25 alarm categories can be added.

---

5. Input a name for the alarm category as desired.
6. Click **Save** to add the alarm category.

Perform the following steps to link a category to an alarm:

1. Enter the HikCentral Control Client.
2. Click **Alarm Center** → **Alarm** to enter the Alarm Center page.
3. Click the alarm name.
4. Select one alarm category in the pop-up window.

### 7.2 How to set audible warnings with custom voice text?

#### Question


How do I set the Control Client's audible warning with a custom voice text for triggered alarms?

#### Answer

Perform the following steps to set audible warning with custom voice text:


1. Enter the Web Client and enter Event & Alarm.
2. In the alarm details page, set **Trigger Audible Warning** switch to ON.
3. Input voice text as desired.



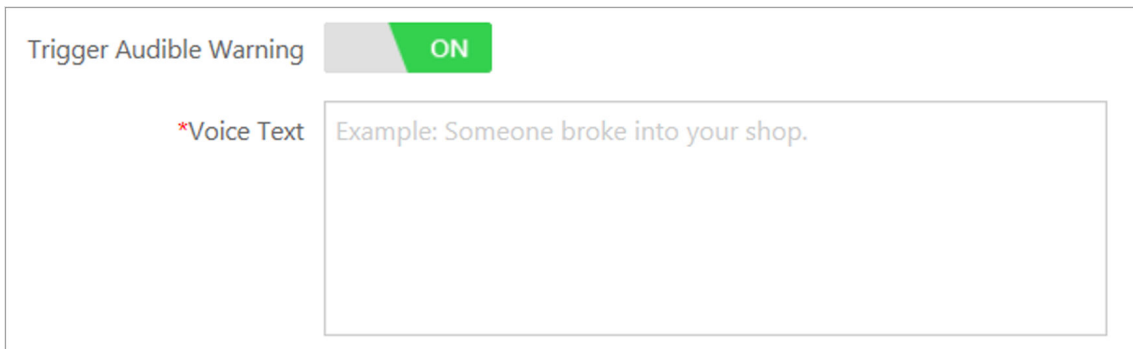

**Figure 7-1 Trigger Audible Warning**

4. Enter the Control Client and enter **System** → **Alarm Center** page.

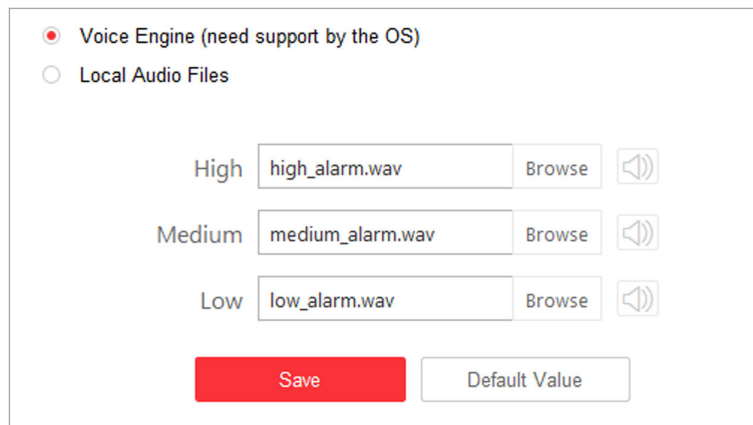

**Figure 7-2 System Settings: Alarm Center**

5. Select **Voice Engine** to enable.

---

**Note**

The OS must support the voice engine function.

---

## 7.3 Can the Central System receive an alarm when testing the alarm on the Remote Site?

### Question

In the Central System, after configuring to receive an alarm from a Remote Site, if I test the alarm configuration on the Remote Site, can the Central System receive an alarm?

### Answer

No. The test alarm on the Remote Site cannot trigger the alarm in the Central System after you enable the **Receive Alarm from Site** function.

## 7.4 Why can't I configure fire source detection alarm for thermal camera?

### Question

I tried to configure an fire source detection alarm for thermal camera, but I couldn't find this alarm name in the alarm list. Why?

### Reason

The thermal camera's VCA resource type was not set as Dynamic Fire Source Detection.

### Solution

Perform the following steps to configure thermal camera's VCA resource type as Dynamic Fire Source Detection:

1. Enter thermal camera's web page.
2. Click **Configuration** → **Advanced Configuration** → **System** → **VCA Resource Type** to enter the VCA Resource Configuration page.
3. Select **Dynamic Fire Source Detection**.

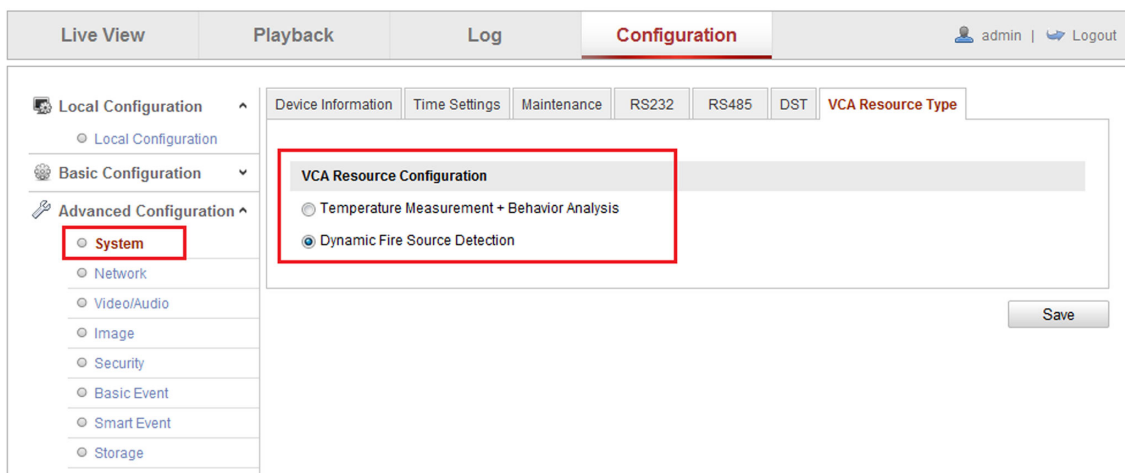


Figure 7-3 Set VCA Resource Type

4. Click **Save**.

## 7.5 Can I add an alarm of Person Amount More/Less than Threshold for resource groups on Remote Site?

## Question

Can I add an alarm of Person Amount More/Less than Threshold for the resource groups on Remote Site?

## Answer

No. You cannot add alarms for the resource groups on the managed Remote Sites.

## 7.6 Why does the alarm's voice prompt keep ringing when logging into the Control Client?

### Question

Why does the alarm's voice prompt keep ringing when logging into the Control Client?

### Answer

If the alarm that occurred at the last login is not acknowledged, the voice prompt will keep ringing until the alarm is acknowledged.

## 7.7 What can I do if there are too many alarms to be acknowledged in the Alarm Center?

### Question

There are too many alarms to be acknowledged in the Alarm Center. What can I do?

### Answer

You can select multiple alarms and click **Batch Acknowledge** to acknowledge them in a batch. Up to 100 alarms can be acknowledged for one time.

Mark	Alarm Name	Alarm Priority	Alarm Time (Contr...	Alarm Source	Area	Triggering Event/Alarm	Alarm Status	Operation
<input checked="" type="checkbox"/>	fzh_camera_16	High	2019/07/07 03:02:01	IPCamera 01	球球球_1...	Camera Offline(Test)	Stop, Unacknowl...	
<input checked="" type="checkbox"/>	IPCamera 09...	Low	2019/07/07 03:01:44	IPCamera 09中文中...	球球	License Plate Mismatched Ev...	Stop, Unacknowl...	
<input checked="" type="checkbox"/>	fzh_camera_16	High	2019/07/07 03:00:32	IPCamera 01	球球球_1...	Camera Offline(Test)	Stop, Unacknowl...	
<input checked="" type="checkbox"/>	IPCamera 09...	Low	2019/07/07 03:00:00	IPCamera 09中文中...	球球	License Plate Mismatched Ev...	Stop, Unacknowl...	
<input checked="" type="checkbox"/>	IPCamera 09...	Low	2019/07/07 02:58:12	IPCamera 09中文中...	球球	License Plate Mismatched Ev...	Stop, Unacknowl...	
<input type="checkbox"/>	fzh_camera_16	High	2019/07/07 02:57:42	IPCamera 01	球球球_1...	Camera Offline(Test)	Stop, Unacknowl...	
<input type="checkbox"/>	IPCamera 09...	Low	2019/07/07 02:56:21	IPCamera 09中文中...	球球	License Plate Mismatched Ev...	Stop, Unacknowl...	
<input type="checkbox"/>	IPCamera 09...	Low	2019/07/07 02:55:57	IPCamera 09中文中...	球球	License Plate Mismatched Ev...	Stop, Unacknowl...	

Figure 7-4 Batch Acknowledgement

## **7.8 Why my HikCentral cannot receive events, such as illegal parking, from traffic cameras?**

### **Question**

Why my HikCentral cannot receive events, such as illegal parking, wrong-way driving, from the traffic cameras?

### **Answer**

For the traffic cameras connected to the system via an NVR which is added to the system directly, the system cannot receive the following events from the traffic cameras:

- Illegal Parking
- Wrong-Way Driving
- Driving on the Lane Line
- Illegal Lane Change
- Motor Vehicle on Non-Motor Vehicle Lane
- Illegal U-Turn

## **7.9 Why the exported PDF file of alarm scheduled report contains garbage characters?**

### **Question**

Why the exported PDF file of alarm scheduled report contains garbage characters?

### **Answer**

When creating scheduled report, the report language should be same to that of operating system.

## **7.10 A lag occurred or no response when receiving events or alarms.**

### **Question**

A lag occurred or no responding when receiving events or alarms.

### **Reason**

No more than 20 events or alarms with pictures can be sent to the Web Client per second. More than 20 may cause a lag or no response.

### **Solution**

When the number of events or alarms with pictures sent to the Web Client per second exceeds 20, stop subscribing to the event and alarm notification.

## Chapter 8 Person Management

### 8.1 When getting persons from device, will the super card be synchronized to the system?

#### Question

When getting person information from device, will the persons' super card information on the device be synchronized to the system?

#### Answer

No. The super card and card for physically challenged information stored on the device cannot be synchronized to the system.  
The normal credentials, credentials under duress, and credentials for dismiss can be synchronized to the system.

### 8.2 Why the new persons cannot be synchronized to the related access group?

#### Question

I have related one person group with one access group. After I add new persons into this person group, why the new persons cannot be synchronized to the related access group?

#### Answer

Please check whether the number of persons in the related access group has reached the upper limit.

### 8.3 Why can't I configure the person ID rules?

#### Question

Why can't I configure the person ID rules?

#### Answer

You can configure the person ID rules only when the person list is empty (i.e., before adding the first person).

## Chapter 9 Face and Body Recognition

### 9.1 Will the device trigger multiple alarms if it recognizes one person in multiple groups?

#### Question

If one person's picture is added to multiple face comparison groups and these groups are applied to one face identification device, and are all configured as face matched or mismatched alarms, will it trigger multiple alarms when the face identification device recognizes the person?

#### Answer

No. It will only trigger one alarm.

### 9.2 Failed to apply the face comparison group to DeepinMind series NVR

#### Question

After adding capture cameras to HikCentral via an DeepinMind series NVR, I failed to apply the face comparison groups to the NVR. The cameras' face comparison function can not be enabled on the web page of the NVR. Why?

#### Reason

For capture cameras connected to DeepinMind series NVR, the face comparison function only can be enabled after being bound to the engine in human face mode in the NVR.

#### Solution

Perform the following steps:

1. Use a monitor to directly connect to DeepinMind series NVR to enter the NVR's local page. Enter **Smart Analysis → Engine Configuration** , set one of engines' working mode as **Picture Recognition - Human Face** . Then the face capturing camera will be bound to the engine automatically.
2. Enable the capture camera's face comparison function in the web page of the DeepinMind series NVR, then HikCentral can apply the face comparison groups to the NVR.

### 9.3 Why the detected face, which is not in any face comparison groups, is not displayed?

### Question

During live view of face capture cameras, only the faces in the face comparison groups can be displayed in the comparison result. The faces that are not in the face comparison group can't be displayed if detected. Why?

### Reason

The cameras hasn't enabled the function of **Upload to monitoring center when comparison failed** .

### Solution

Perform the following steps to enable this function:

1. Enter the web page of the face capture camera:
2. Click **Configuration** → **Event** → **Face Comparison** to enter the Face Comparison page.
3. Select **Upload to monitoring center when comparison failed**.

## 9.4 Why can't I set face capture events for normal cameras accessed via DeepinMind?

### Question

I added normal cameras to DeepinMind series NVR and enabled face capture function for them. I added this NVR to HikCentral and import these cameras to the system. But I can't find face capture event in the event list when adding a event for these cameras. Why?

### Reason

These normal cameras do not support the face capture function.

### Solution

Please use capture cameras.

## 9.5 Why there is no camera available when applying face comparison groups to device?

### Question

Why there is no camera available when applying face comparison groups to DeepinView and DeepinMind device?

### Answer

Please make sure you have set the cameras of these devices as facial recognition cameras in License Details (the same as ANPR cameras and thermal cameras).

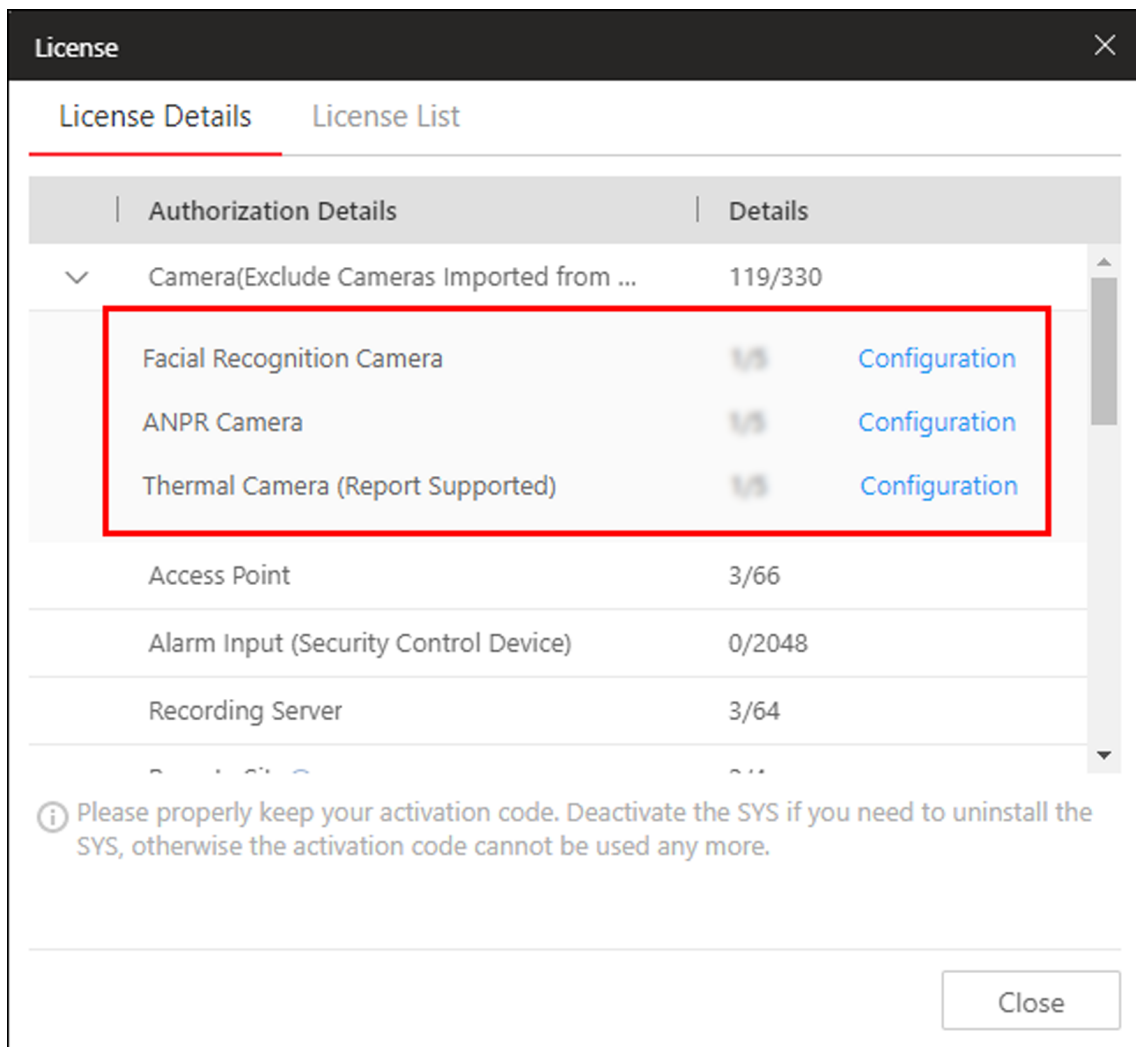


Figure 9-1 License Details

## 9.6 Why can't I search the captured pictures on Edge Facial Recognition Server?

### Question

Why can't I search the captured pictures on Edge Facial Recognition Server?

### Answer

For HikCentral Professional V1.7 and later versions, the Edge Facial Recognition Server of firmware version 1.2 doesn't support captured pictures search.



## **9.7 Can I set both facial and body recognition for one camera?**

### **Question**

Can I set both facial and body recognition for one camera linked to the DeepinMind Server?

### **Answer**

No. You can set facial recognition or human body recognition as the recognition type for one camera linked to the DeepinMind Server.

## **9.8 Why the human body recognition doesn't work after I set the recognition type of a capture camera as human body recognition?**

### **Question**

Why the human body recognition doesn't work after I add a capture camera to a DeepinMind Server and set the recognition type as human body recognition?

### **Answer**

For the capture camera linked to the DeepinMind Server, you can only set the recognition type as facial recognition.

For the DeepinView cameras, you can only set recognition type as human body recognition.

## **Chapter 10 Access Control and Elevator Control**

### **10.1 Why cards are still "To Be Applied" in Troubleshooting module even if I have successfully applied them to devices before?**

#### **Question**

Why cards are still "To Be Applied" in Troubleshooting module even if I have successfully applied them to devices before?

#### **Answer**

The device to be applied to may manage access levels based on card. If the information related to the card is failed to be applied, it will also be displayed in the card applying status.

### **10.2 Can I view the access event statistics from access control devices which were installed in different countries or regions?**

#### **Question**

Can I view the access event statistics from access control devices which were installed in different countries or regions?

#### **Answer**

No. You cannot view the access event statistics from access control devices in multiple time zone.

### **10.3 Why can't I search some card-swiping events in access records?**

#### **Question**

Why can't I search some card-swiping events in access records?

#### **Answer**

Access records are saved every one minute. If the service stops in a certain minute, records during that minute will lose.

### **10.4 Failed to copy the parameters configured for the door station to the MinMoe access control terminal**

### **Question**

I failed to copy the parameters configured for the door station to the MinMoe access control terminal. Why?

### **Answer**

Devices of the same type but of different models have different capabilities. When the parameters you configured exceeded the limit, you fail to copy the parameters of one device to another device which is of a different model.

## Chapter 11 Time and Attendance

### 11.1 Can I filter the attendance data by combined authentication mode?

#### Question

Can I filter the attendance data by combined authentication mode (e.g., card + fingerprint)?

#### Answer

No. The attendance data can only be filtered by single authentication mode.

### 11.2 Can I view the historical person information in the attendance records?

#### Question

Can I view the historical person information in the attendance records?

#### Answer

No. The person information in the attendance records will be refreshed timely. When a person is moved to other person group, to which the organization information is related will be displayed in the attendance records.

## Chapter 12 Security Control

### 12.1 Why can't I add the AX Pro security control panel to the platform?

#### Question

Why can't I add the AX Pro security control panel to the platform?

#### Answer

You can only add AX Pro security control panel to the platform in Hikvision ISUP protocol.

### 12.2 Why can't I relate a speed dome with the radar for calibration?

#### Question

Why can't I relate a speed dome with the radar for calibration?

#### Answer

For 120 m security radar, only the speed dome added by the speed dome's admin account can be related to the radar for calibration.

### 12.3 Why arming radar failed?

#### Question

When I try to arm the security radar, it prompts "Arming failed". Why?

#### Answer

Make sure there is no one moving inside the zones of the radar, or arming will fail.

### 12.4 Can I control the siren of the wireless security control panel manually?

#### Question

Can I control the siren of the wireless security control panel manually?

#### Answer

No. You cannot manually control the siren of the wireless security control panel, or manually control wireless siren of the hybrid security control panel.

## Chapter 13 Entrance and Exit

### 13.1 Can I search the records of vehicles entering or exiting parking lot within 3 months?

#### Question

Can I search the records of vehicles entering or exiting parking lot within 3 months?

#### Answer

No. When searching vehicles entering or exiting the parking lot, the time period you set should contain no more than 31 days.

### 13.2 How to connect alarm input and relay to the barrier gate?

#### Question

How to connect alarm input of capture unit and relay of video intercom/access control device to the barrier gate?

#### Answer

Connection for Opening Barrier Gate

- For capture unit, connect Alarm Input 1 of the capture unit to the Rise interface of barrier gate.
- For access control device or video intercom device, connect Relay 1 of the device to the Rise interface of barrier gate.

Connection for Closing Barrier Gate

- For capture unit, connect Alarm Input 2 of the capture unit to the Fall interfaces of barrier gate.
- For access control device or video intercom device, connect Relay 2 of the device to the Fall interfaces of barrier gate.

### 13.3 Why I cannot open the barrier gate manually?

#### Question

Why I cannot open the barrier gate manually?

#### Answer

If you set a 4-series or 7-series camera as the capture unit and set capture unit for barrier control, and the 4-series or 7-series camera is added to the system directly, not via an NVR, you cannot perform opening barrier manually.

### **13.4 Why the Control Client cannot receive the video intercom request from the entrance and exit?**

#### **Question**

Why the Control Client cannot receive the video intercom request from the entrance and exit?

#### **Answer**

If you have set video intercom device for the lanes in the parking lot, the system will not apply the SIP server information to the device automatically. If you have enabled SIP server settings with other tools, you cannot receive video intercom request of this video intercom device via the Control Client.

### **13.5 Can I add the doors of the access control device which is already linked to a lane to an access level?**

#### **Question**

Can I add the doors of the access control device which is already linked to a lane in the entrance and exit to the access level for access control?

#### **Answer**

No.

If the access control device is already linked to the lane (in the lane details page, as shown in the picture below), the doors of this device cannot be used for access control.

**Vehicle**      **Parking Lot**      **Entry & Exit Rule**

⬅️ [Blurred Area]

**Basic Information**

\* Lane Type     Entrance  
                           Exit

\* Lane Name   

**Linkage Device**

Capture Unit   

**i** Device Type     Access Control Device  
                           Video Intercom Device

Select Device   

Display Screen   

Device for Barrier Control   

**Figure 13-1 Link an Access Control Device to Lane**



## Chapter 14 Smart Wall

### 14.1 Why does error code 11116 occur when displaying live view on the smart wall?

#### Question

When I want to display live view on the smart wall, it displays an error message with error code 11116. What's going on?

#### Answer

If you add a decoding device in WAN, you must enable the SYS server's WAN access and set its network parameters, or displaying live view and alarm on smart wall will fail and display error code 11116.

To enable the WAN access function, log into the Web Client and enter **System** → **Network** → **WAN Access** .

### 14.2 Can I add DS-C10S to the system as a decoding device and link it to a smart wall?

#### Question

Can I add a video wall controller (DS-C10S series) to the system as a decoding device and link it to a smart wall? What smart wall functions does a DS-C10S not support?

#### Answer

Yes. The following HikCentral smart wall functions are NOT supported by the DS-C10S series video wall controller:

- Opening a roaming window on the sub window after window division.
- Setting a window division when the window is overlapped by a roaming window.
- Setting a roaming window's window division.

### 14.3 Failed to add video wall controller (DS-C10S) to HikCentral

#### Question

I tried to add video wall controller (DS-C10S) to HikCentral, but failed and received an error message "The device doesn't support token authentication mode by shared key". Why?

### **Reason**

The video wall controller's current version does not support token authentication.

### **Solution**

Upgrade the video wall controller's firmware to V3.0.4, and then add it to HikCentral.

## **14.4 What smart wall functions does a DS-6400HDI-T not support?**

### **Question**

What smart wall functions does a DS-6400HDI-T series decoder not support?

### **Answer**

Enlarging the sub window after window division is not supported by DS-6400HDI-T series.

## **14.5 How many roaming windows can be opened on one window?**

### **Question**

For each decoding output, how many roaming windows can be opened on one window (called base window) linked with one decoding output?

### **Answer**

It varies depending on difference devices.

- For video controller DS-C10S series:
  - In Normal mode, up to 16 windows can be opened and overlapped on the base window. The total area of the opened windows should be no more than 4 times of the area of the base window.
  - In Tile mode, up to 8 windows can be opened on the base window and they cannot be overlapped.
- For decoder DS-6900UDI series, up to 36 windows can be opened and overlapped on the base window. The total area of the opened windows should be no more than 3 times of the area of the base window.
- For decoder DS-6400HDI-T series, up to 16 windows can be opened and overlapped on the base window. The total area of the opened windows should be no more than 3 times of the area of the base window.

## **14.6 Why the live view on smart wall fails but the playback is normal?**

### **Question**

When the decoding device and Control Client are in LAN and encoding devices are in WAN, the live view on smart wall fails but the playback is normal. Why?

### **Reason**

In this case, the decoding device gets video stream directly via the encoding devices. If the decoding device cannot access to WAN, the live view on smart wall fails. While the playback on smart wall is forced to pass through Streaming Gateway, so it succeeded.

### **Solution**

Configure correct gateway address for the decoding device to make it able to access WAN.

## **14.7 Can DS-1200KI and DS-1600KI keyboard log into HikCentral by domain name?**

### **Question**

Can the DS-1200KI and DS-1600KI keyboard log into HikCentral by domain name or Windows domain name?

### **Answer**

No. DS-1200KI and DS-1600KI can log into HikCentral by IP address only.

## **14.8 Why can't the DS-1600KI keyboard log into HikCentral?**

### **Question**

The DS-1600KI keyboard can't log into HikCentral, but the keyboard proxy server works normally and I can visit the HikCentral Web Client normally. Why?

### **Reason**

There is no smart wall authority in the license.

### **Solution**

Apply license with smart wall module.

## **14.9 Can I create a roaming window on the smart wall of graphic card?**

### **Question**

Can I create a roaming window on the smart wall of graphic card?

### Answer

No. Roaming window is only supported by smart wall (decoding device).

### 14.10 I have changed the camera stream type, but it doesn't take effect. Why?

#### Question

I have changed the default stream type for cameras on Smart Wall, but it doesn't take effect. Why?

#### Answer

You need to restart the live view on the Smart Wall and then the stream type will be switched to the one you set on the Web Client.

### 14.11 How to display my desktop on the smart wall?

#### Question

How to display my desktop on the smart wall?

#### Answer

1. Contact our technical support to get the installation package of RSC server, which is for remote system control.
2. Install the RSC server on your PC.

---

#### Note

- The operating system of your PC should be Microsoft® Windows 7 or 8.1.
- Microsoft® Windows 10 and Windows Server OS are not supported.

3. Set a password for RSC server.

---

#### Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.


4. On the Web Client, enter **Physical View → Encoding Device** and add your PC (regarded as an encoding device) where the RSC server is installed to HikCentral Professional by IP address.

### Note

When adding the PC to HikCentral Professional, the default port number is 8000, and the password should be the same with the one configured on RSC server in Step 3.

5. On the Web Client, enter **Logical View** → **Cameras** to add the virtual camera of the PC to area,
6. On the Control Client, click **Monitoring** to enter the Monitoring module.
7. Click **Logical Resource** tab, hover the cursor on the name of the virtual camera of your PC, click **...** → **Display on Smart Wall** , and select a smart wall to display the desktop on the smart wall.

### Note

- The virtual camera's icon will turn to  , and your desktop will be displayed on the smart wall.
- Only main stream is supported.

## 14.12 Can I start playback in the alarm pop-up window?

### Question

Can I start playback in the alarm pop-up window?

### Answer

No. The alarm pop-up window does not support playback.

## 14.13 Failed to open the window and set the window division, and received an error message with error code "951"

### Question

I failed to open the window and set the window division, and received an error message with error code "951". Why?

### Answer

The number of windows on the decoding device exceeded the upper limit. Different device models support different number of sub-windows.

## 14.14 Why can't I set the roaming window division for the DS-C10S series decoding output?

### Question

Why can't I set the roaming window division for the DS-C10S series decoding output?

### **Answer**

When the decoding output is not cascaded, the number of sub-windows overlapped by each decoding output is limited. For example, you cannot open the roaming window in the sub-window area of 4-Window and above; you cannot set division for windows overlapped by the roaming window.

### **14.15 Can I open 2 full-screen roaming windows for the DS-6900UDI series decoding output?**

#### **Question**

Can I open 2 full-screen roaming windows for the DS-6900UDI series decoding output?

#### **Answer**

No. There is an upper limit to the total area of sub-windows supported by single decoding output. For the DS-6900UDI/DS-6400-T series decoding output, up to 1 full-screen roaming window is supported; for the DS-C10S-T series decoding output, up to 2 full-screen roaming windows are supported.

### **14.16 Why an error occurred when I opened a roaming window for BNC decoding output on the Control Client?**

#### **Question**

Why an error occurred when I opened a roaming window for BNC decoding output on the Control Client?

#### **Answer**

The BNC decoding output linked to the platform can only open the full-screen roaming window.

### **14.17 Failed to enlarge and restore the window and received an error message with the error code "23"**

#### **Question**

I failed to enlarge and restore the window and received an error message with the error code "23". Why?

#### **Answer**

Some types of decoding devices do not support enlarging and restoring sub-windows.

### **14.18 Why can't I drag the local signal source to other windows for use?**

#### **Question**

Why can't I drag the local signal source to other windows for use?

#### **Answer**

The local signal source of some decoders cannot be dragged to multiple windows simultaneously.

### **14.19 Failed to open the window and received an error message with the error code "29"**

#### **Question**

I failed to open the window and received an error message with the error code "29". Why?

#### **Answer**

You cannot open the window for decoding output of 4 K and other resolutions simultaneously.

### **14.20 The local signal source has been connected, but its status is displayed as disconnected on the DS-6900UDI series decoder. Why?**

#### **Question**

The local signal source has been connected, but its status is displayed as disconnected on the DS-6900UDI series decoder. Why?

#### **Answer**

For the DS-6900UDI series decoder, displaying local signal source is not supported.

### **14.21 Failed to display playback on the wall and failed to display live view on the wall by a network keyboard.**

#### **Question**

Failed to display playback on the wall and failed to display live view on the wall by a network keyboard.

#### **Solution**

For V2.3 and above, the functions are available after upgrading the patch pack of the network keyboard.

## Chapter 15 Map

### 15.1 How many times can I add one camera as a hot spot on maps?

#### Question

Can I add one camera repeatedly as multiple hot spots on the map?

#### Answer

One camera can be added for only once on a single map, and one camera can be added as a hot spot on up to 6 maps.

### 15.2 Why can't I view the GIS map on the Control Client?

#### Question

I have configured the GIS map via the Web Client, but I still cannot view the GIS map on the Control Client. Why?

#### Answer

You should enable DirectDraw on the computer which runs the Control Client. To check if your computer has enabled DirectDraw, run cmd.exe as an administrator and enter *dxdiag*.

### 15.3 Why can't I get any results when searching cameras in search field of GIS map?

#### Question

Why can't I get any results when searching cameras in the search field of the GIS map?

#### Reason

The search field in the GIS map adopts the interface of Google Map. So you cannot search the camera in this way.

#### Solution

You can search the camera in the following way:

1. On the Web Client, drag the camera hot spot to the GIS map.
2. Enter the Monitoring module of the Control Client, enter the keyword of the camera name in the search field above the resource tree on the left of the page.
3. In the search results, click the location icon beside the camera name, and the target camera's location will be shown on the map.



## Chapter 16 Security

### 16.1 How to set the minimum password strength?

#### Question

How can I set the system's minimum password strength?

#### Answer

HikCentral provides three types of password strength, i.e., Weak, Medium, and Strong. By default, the minimum password strength is Medium.

You can access the Web Client and enter **Security** → **Security Settings** , check the definition for each type of password strength and select one optionally.

### 16.2 How to reset another user account's password?

#### Question

For Admin user, how can I reset a normal user's password?

#### Answer

To reset a password, you can access the Web Client and perform the following steps:

1. Enter **Security** → **Users** .
2. Click the user's user name to enter the user details page.
3. Click **Reset** to reset the user's password to the default one.

### 16.3 Can I change the password for an added third-party device?

#### Question

I have added a third-party encoding device to HikCentral, but I can't change its password via the Web Client. Why?

#### Answer

You can only change the password for Hikvision device. Devices added via Open Network Video Interface protocol do not support this function.

## Chapter 17 Live View and Playback

### 17.1 Failed to view live video via Google Chrome or Firefox browser

#### Question

Failed to view live video via Google Chrome or Firefox browser but succeeded via Internet Explorer. Why?

#### Reason

For the web browser except Internet Explorer, the Web Client adopts port number 559 for live view. In this case, the 559 port of Streaming Gateway or Streaming Server may not be accessible.

#### Solution

Open port number 559 on firewall, or map the port to WAN.

### 17.2 Why can't I access the live view and playback on the device remote configuration page?

#### Question

Why can't I access the live view and playback on the device remote configuration page?

#### Answer

If you access the device remote configuration page from the Web Client or Control Client, and the web browser is Google Chrome, you cannot access the functions such as live view, playback, OSD settings, local configuration, etc.

### 17.3 Why is no POS information displayed during live view or playback?

#### Question

Why can't I see any POS transaction information on the live view or playback window after I enable GPU decoding on the Control Client.

#### Answer

POS information display is not available when GPU decoding is enabled.

### 17.4 What is the difference between Public View and Private View?

### Question

What's the difference between Public View and Private View?

### Answer

Any user logged in to HikCentral can see the views in Public View and perform related operations. Only the user who created the view can see the views in Private View and perform related operations.






## 17.5 How to set a view group for view auto-switch?

### Question

How do I set a view group for view auto-switch?

### Answer

Perform the following steps to set a view group:

1. Open the HikCentral Control Client and enter the Monitoring page.
2. Click  to enter the view mode.
3. Click  to add a view group.
4. Click  to create a new view.  
The new view is in 4-window mode by default.
5. Click  and select the window division type for the new view.
6. Click  to enter the area mode.
7. Drag the camera to the display window, or double-click the camera name after selecting the display window to start the live view.
8. Click **Save** to save the new view.
9. Drag the custom view group to a display window.  
The views belongs to the view group will start switching automatically.

## 17.6 Why there is no camera in area?

### Question

Why does the prompt "There is no camera in this area." pop up when I double-click an area for live view or playback?

### Answer

Make sure the cameras belong directly to the area instead of its child area. The cameras added to a child area are not available for the parent area.


## 17.7 Why there is no alarm lamp appeared on the area icon when an alarm is triggered?

### Question

In the resource tree, an alarm is triggered by the resource in the sub area, but there is no alarm lamp icon appeared on its parent area's icon. Why?


### Answer

For better performance of the Control Client, after you launch the Control Client, if you haven't expanded the sub-areas of the parent area yet, when an alarm is triggered on the resource in the sub-area, there will be no alarm lamp icon displayed on its parent area node.



**Figure 17-1 Alarm Lamp Icon on Sub Area Node**

After you expand the sub-area nodes in the resource tree, if an alarm is triggered on the resource in the sub-area again, an alarm lamp icon will display on both parent area node and sub-area node.



**Figure 17-2 Alarm Lamp Icons on Both Parent Area and Sub Area Nodes**

## 17.8 Why there is no temperature overlaid on the video footage recorded in visual tracking?

### Question

Why there is no temperature information overlaid on the video footage recorded in visual tracking mode?

### Answer

In visual tracking mode, the video footage recorded manually will not contain VCA information, such as temperature, detection frame, line-crossing line, etc.



## 17.9 How to view alarm-triggered video files during playback?

### Question

How do I search and view the alarm-triggered video files of a specified camera on the Control Client during playback?

### Answer

Perform the following steps to search and view the alarm-triggered video files.

1. Open the HikCentral Control Client and enter the Monitoring page.
2. Switch to Playback mode.
3. Drag the specified camera to the display window, or double-click the camera to start playback.
4. Click  on the toolbar to select the date and time to search the video files.
5. Click  on the left side of the playback toolbar to select **Event Recording**. The alarm-triggered video files will be filtered and played.

## 17.10 How to view video files from the last 7 days?

### Question

How can I view the video files from the last 7 days?

### Answer

You can perform one of the followings to check the recorded video files on a certain day or during a certain period.

- Enter the Monitoring module of the HikCentral Control Client and switch to Playback mode. Drag the slider on the timeline bar to play the video at the specific time.
- Enter the **Video Search** → **Video Clip** module of the HikCentral Control Client. Select **Segment** as a search type and **Last Week** as the search time.

## 17.11 Why is there no time period selection bracket when downloading video?

### Question

Why can't I see the bracket (in yellow or orange color) for selecting downloading time period on the timeline bar when I want to download a video clip during playback?

### Answer

Check the time and time zone of both your storage device and camera to make sure they are synchronized.

## 17.12 Why can't I play back the video files stored in the Hybrid SAN in reverse?

### Question

I cannot play back the video files stored in the Hybrid SAN in reverse. Why?

### Answer

Reverse playback of video files stored in a Hybrid SAN is not supported for streams in H.264+, H.265, and H.265+ encoding formats.

## 17.13 Why can't I view the camera's image thumbnails?

### Question

Why cannot I view the camera's image thumbnails even though I have enabled this function?

### Answer

The thumbnails are not supported in the following situations:

- The camera is imported from a Remote Site and the Remote Site is offline
- The camera is imported from a Remote Site and the Remote Site's version is earlier than V1.3.
- The channel is channel-zero.

## 17.14 Why can't I enable fisheye expansion during live view or playback?

### Question

I cannot enable fisheye expansion during live view or playback. Why?

### Answer

There are two situations that do not support fisheye expansion:

- The Control Client doesn't support fisheye expansion after enabling GPU expansion.
- Direct3D must be enabled on your PC. To check if your PC has Direct3D enabled, run cmd.exe in administrator mode and input ***dxdiag***.

## 17.15 Why can't I view live video from a device on the LAN via Remote Configuration?

### **Question**

In the device's Remote Configuration page on the Web Client, I can't view live video of the device which is deployed on the LAN. Why?

### **Answer**

When the devices are deployed on the LAN, you cannot perform live view when accessing the device's Remote Configuration page via the Web Client on the WAN.

## **17.16 Can I add tags to the videos of Remote Site cameras?**

### **Question**

Can I add tags to the videos of Remote Site cameras?

### **Answer**

No. For the cameras imported from Remote Sites, you cannot add tags to the video files.

## **17.17 No vehicles related pictures but succeeded to get the vehicles passing records**

### **Question**

During live view, I could get the vehicles passing records but failed to get vehicles related pictures. Why?

### **Reason**

Check if the ANPR camera is imported to the system via an NVR. NVR only supports uploading pictures which are smaller than 512 KB to the system.

### **Solution**

Adjust the size of the camera's captured pictures to make them smaller than 512 KB.

## **17.18 Failed to view live video in more than 4 windows with error code "SMS17"**

### **Question**

Succeeded to view live video in 1-window but failed to view live video in more than 4 windows and I received an error code "SMS17". Why?

### Reason

The Control Client has been set as switching the video stream type automatically. By default, when the window proportion of the displaying area is smaller than  $\frac{1}{4}$ , the Control Client will get sub-stream for live view. If the camera does not support sub-stream, it will cause failure.

### Solution

Adjust the threshold for main/sub-stream to be smaller than the current window division on the Control Client. Log into the camera's web page to check whether it supports sub-stream.

## 17.19 Failed to view live video when the WAN access was enabled

### Question

I have enabled the WAN access in HikCentral and entered the correct LAN IP address, but I couldn't view the live video on the Control Client and smart wall. Why?

### Reason

When WAN access is enabled, the Control Client and smart wall will access devices in proxy mode and get video stream via Streaming Gateway. When the Control Client and smart wall request more than 200 channels video stream simultaneously, which exceeds the Streaming Gateway's limitation, it will cause failure.

### Solution

Do not enable the WAN access when the HikCentral clients, SYS server and devices are in the same LAN.

## 17.20 Failed to view live video with error message "HCHetSDK4"

### Question

I tried to view live video, but failed and received an error message "HCHetSDK4". Why?

### Reason

The channel No. is incorrect because there are newly added cameras or deleted cameras on the encoding device locally.

### Solution

Perform the following steps:

1. In the Physical View of the Web Client, click **Refresh** to get the new status of the encoding device's cameras.
2. In the Logical View of the Web Client, delete the cameras of which the channel No. is incorrect and add them again.



## 17.21 Failed to view live video with prompt "Runtime exception. Secret key error."

### Question

I tried to start live video, but failed and received a prompt message "Runtime exception. Secret key error". Why?

### Reason

The NVR has enabled stream encryption, and the video stream of the live view has been encrypted. However you didn't enter the encryption key in HikCentral, which caused the failure of decoding.

### Solution

Choose one of the solutions to solve this problem:

- Disable the stream encryption function in the NVR with the following steps :
  1. Enter the web page of the NVR.
  2. Click **System** → **Security** → **Security Service** to enter the security service page.
  3. Unselect **Stream Encryption**.
- Enter the correct encryption key of the NVR in the encoding device's details page in Physical View of HikCentral Web Client.

## 17.22 Failed to view live video or video is not fluent when hardware decoding enabled

### Question

When hardware decoding was enabled, I can't view the live video (and I received an error code "2311") or the live view is not fluent. Why?

### Reason

The performance of the graphics card of the PC running the Control Client is insufficient, causing the failure of H.265 video stream decoding.

### Solution

- If the video's encoding format is H.265, change your computer graphic card as the following requirements:

- For Intel® integrated graphic card, it should be Intel® HD Graphics 530 and above.
- For NVIDIA® graphic card, it should be GeForce GTX 1060 and above.
- AMD® graphic card is not supported.
- Or you can change the video's encoding format as H.264.

### **17.23 Why can't I view the real-time access records on the Control Client?**

#### **Question**

I can't view the real-time access records (such as card swiping information) during live view. But I can find the historical access records in Access Control module. Why?

#### **Reason**

The time zone of the access control device is inconsistent with SYS service.

#### **Solution**

Log into the access control device via SDKdemo to edit the time zone settings.

### **17.24 Can I add a patrol or pattern for the camera added by Open Network Video Interface protocol?**

#### **Question**

Can I add a patrol or pattern for the camera added by Open Network Video Interface protocol?

#### **Answer**

No. For the cameras added by Open Network Video Interface protocol, only the following functions of PTZ control are supported.

- PTZ movements in eight directions: Up, Down, Right, Left, Upper-Right, Upper-Left, Lower-Right, Lower-Left
- Auto-scan
- Zoom-in and zoom-out
- Adding preset, editing preset, deleting preset, and calling preset

### **17.25 Why image flicks or confusing layout occur during live view or playback on Firefox® under Microsoft® Windows 10?**

### **Question**

Why image flicks or confusing layout occur during live view or playback on Firefox® under Microsoft® Windows 10?

### **Reason**

Under the Microsoft® Windows 10, the pop-up window of Firefox® will be shielded by the control.

### **Answer**

Before opening the control, close the pop-up window or exit the control to close the pop-up window and enter again.

## **17.26 Why can't I play back videos stored in the Recording Server via the Streaming Server?**

### **Question**

Why can't I play back videos stored in the Recording Server via the Streaming Server?

### **Answer**

You can only play back videos stored in the local storage via the Streaming Server.

## **17.27 Failed to encrypt stream during live view by android body camera.**

### **Question**

Failed to encrypt stream during live view by android body camera.

### **Reason**

DS-MH2311 and DS-MCW407(C) only support encrypting the stream of playback.

## Chapter 18 Video Search

### 18.1 Why can't I search and play back the motion detection's video footage?

#### Question

I cannot search and play back the motion detection's video footage. Why?

#### Answer

VCA playback doesn't support playback of video footage (triggered by motion detection) stored in the Hybrid SAN and pStor.

### 18.2 Can I search POS transaction events on Remote Site cameras?

#### Question

Can I search POS transaction events occurred on Remote Site cameras?

#### Answer

No. For the cameras imported from Remote Sites, the following functions are NOT supported in the Video Search module:

- Searching video footage stored on dock stations.
- Searching video footage triggered by transaction event.
- Searching video footage triggered by ATM events by entering card numbers.

### 18.3 Failed to export CVS file

#### Question

Failed to export CVS file.

#### Answer

When exporting CVS file, only English letters or symbols can be contained in the file.

## Chapter 19 Downloading Video Files

### 19.1 Failed to download video files when playing back with error prompt "SDK9"

#### Question

I tried to download video files when playing back the video of Hikvision 2-line network camera, but failed and received an error message "SDK9". Why?

#### Reason

The Hikvision 2-line network cameras don't support playback and downloading video files simultaneously due to the limit of camera performance.

#### Solution

Pause the playback and then download video.

### 19.2 The video has no image or audio after it is downloaded in AVI format

#### Question

After I download and save the video files in AVI format, the video has no image or audio when playing. Why?

#### Answer

To save the video file in AVI format, the video's encoding format should be MPEG4, H264, or MJPEG, and the audio encoding format should be AAC, G711A, or G711U. Data such as ATM information, POS transaction information, and temperature information cannot be saved in the video file in AVI format.

### 19.3 Why the time of video in VSPlayer is inconsistent with the downloading time?

#### Question

After downloading a video file of larger than 2 GB, when I play the video with VSPlayer, the video time in VSPlayer is inconsistent with the start and end time of downloading. Why?

### **Reason**

When the video is larger than 2 GB, it will be automatically divided into two files to be downloaded. When you click **Open** to play the video, only the first file will be played.

### **Solution**

Manually play the video in the downloading directory.

## Chapter 20 Intelligent Analysis Report

### 20.1 Failed to get BI report data and license plate information

#### Question

When the ANPR camera, people counting camera, and heat map camera are added to HikCentral via an NVR, the Control Client failed to get the corresponding people counting information, heat map information, and license plate information. Why?

#### Reason

NVR firmware version does not support uploading such data.

#### Solution

Upgrade the NVR's firmware to the version which supports this function.

### 20.2 Why can't I generate a report for the resources on the Remote Site?

#### Question

Why can't I generate a report for the resources on the Remote Site?

#### Answer

If the Remote Site's version is earlier than 1.3, you cannot generate reports (including people counting, temperature, heat map, and vehicle analysis) for its resources.

### 20.3 Why can't I generate a temperature report of a thermal camera?

#### Question

Why can't I generate a temperature report of a thermal camera on the current site?

#### Answer

If the thermal camera is not directly added to the system, which means it is connected to an NVR and the NVR is added to the system, temperature report is not supported.

### 20.4 Can I search BI data occurred before the camera added to the system?

### **Question**

Can I search the data of the BI reports which are occurred before the camera is added to the system?

### **Answer**

You need to connect the camera to an NVR (version 4.21.0) and then add the NVR to the system. HikCentral Professional supports getting the BI reports' data (including people counting and heat analysis) occurred 7 days before. If the camera is offline, the system can also get the BI data generated during offline period.



## Chapter 21 IP Speaker

### 21.1 Can I add the IP speaker to the platform via domain name?

#### Question

Can I add the IP speaker to the platform via domain name?

#### Answer

No. It is not supported.

### 21.2 Why does a speaker unit pause for a while between playing two audio files during scheduled broadcast?

#### Question

Why does a speaker unit pause for a while between playing two audio files during scheduled broadcast?

#### Answer

During scheduled broadcast, there will be a five-second pause between playing two audio files. To be specific, after playing the first audio file, the speaker unit will pause for five seconds and then start playing the second audio file, and there will always be a five-second pause between every two audio files afterward.

### 21.3 Why does the error code "10002" pop up when I am applying multiple audio files to a speaker unit for scheduled broadcast?

#### Question

Why does the error code "10002" pop up when I am applying multiple audio files to a speaker unit for scheduled broadcast?

#### Answer

Please restart the speaker unit, and reapply the audio files to the speaker unit when it is online.

### 21.4 Can another person and I speak via the same speaker unit at the same time?

**Question**

Can another person and I speak via the same speaker unit at the same time?

**Answer**

No. This function is not supported currently.

**21.5 Why can't I upload audio files via Internet Explorer?**

**Question**

Why can't I upload audio files via Internet Explorer?

**Answer**

Internet Explorer and Safari do not support uploading audio files. Currently, the browsers that support this function are: Google Chrome, FireFox, and Edge.

**21.6 Can I adjust the volume of live broadcast via the platform?**

**Question**

Can I adjust the volume of live broadcast via the platform?

**Answer**

No. You can only go to the Web page of a speaker unit, and then log in to the speaker unit to adjust the volume of live broadcast. However, you can adjust the volume of scheduled broadcast via the platform.

**21.7 Why can't I broadcast the WAV audio file via a speaker unit?**

**Question**

Why can't I broadcast the WAV audio file via a speaker unit?

**Answer**

Speaker units do not support broadcasting WAV audio files.

## Chapter 22 Security Inspection

### 22.1 Can I access to a security inspection device installed in another country or region via the platform or the Client?

#### Question

Can I access to a security inspection device installed in another country or region via the platform or the Client?

#### Answer

No. But you can do that when the device, the platform and the Client are in the same time zone.

## Chapter 23 Upgrade

### 23.1 After upgrading the platform, some historical data are missing.

#### Question

After upgrading the platform, some historical data are missing.

#### Answer

The synchronization of historical data is performed after upgrading the platform, which may take some times. The time depends on the amount of the data.

### 23.2 Can customized software be upgraded to a new baseline version?

#### Question

Can customized software be upgraded to a new baseline version?

#### Answer

No. Only the platform of a baseline version can be upgraded to a newer baseline version.

### 23.3 During the upgrade, a prompt shows notifying that SUP has expired.

#### Question

During the upgrade, a prompt shows notifying that SUP has expired.

#### Solution

Purchase SUP License, or delay the upgrading time of the SUP License before upgrade.

### 23.4 How to upgrade a platform with a Rose hot spare?

#### Question

How to upgrade a platform with a Rose hot spare?

#### Answer

The host server and the spare server should be upgraded separately. Do not upgrade the host server without upgrading the spare server.

## **23.5 How to upgrade the platform of versions earlier than V1.4 to V 2.x?**

### **Question**

How to upgrade the platform of versions earlier than V1.4 to V 2.x?

### **Answer**

Upgrade the platform to V1.7, and then upgrade it to V2.x.

## **23.6 No enough disk space when upgrading the platform.**

### **Question**

No enough disk space when upgrading the platform.

### **Solution**

Before upgrading, make sure the rest space of the database is larger than the rest space of the pgdata filefolder.

## **23.7 Some devices' do not work after upgrading the platform.**

### **Question**

Some devices' do not work after upgrading the platform.

### **Solution**

Before upgrading, make sure the devices are compatible with the platform which has been upgraded. Contact our technical support to check the compatibility.

## **23.8 Will the pStor server be upgraded as well when upgrading HikCentral Platform?**

### **Question**

Will the pStor server be upgraded as well when upgrading HikCentral Platform?

### **Answer**

No. You need to upgrade the pStor server exclusively after downloading the newest installation package on the official website.

## Chapter 24 Others

### 24.1 Failed to import the HTTPS SSL certificate to the system


#### Question

Why I failed to import the HTTPS SSL certificate when switching the system's transfer protocol to HTTPS?

#### Reason

Currently, HikCentral professional only supports importing one certificate file which contains both public key and private key. If the private key and public key are in different PEM files, the importing will fail.

#### Solution

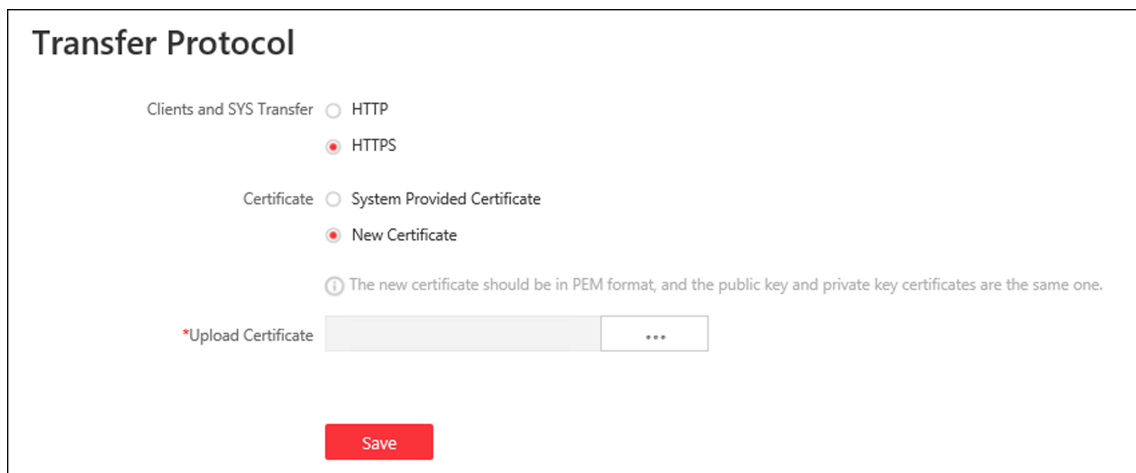

**Transfer Protocol**

Clients and SYS Transfer  HTTP  
 HTTPS

Certificate  System Provided Certificate  
 New Certificate

*i* The new certificate should be in PEM format, and the public key and private key certificates are the same one.

\*Upload Certificate  ...

**Save**

**Figure 24-1 Import HTTPS Certificate**

Open the certificate files (in PEM format) with Text, and copy the content in the private key file, and paste it after the content in the public key file. Then import the certificate file with both public and private keys.

### 24.2 Why can't I view the password of the database via the Web Client?

#### Question

Why can't I view the password of the database via the Web Client?

### **Answer**

You can only check the password of the database via the Web Client running on the SYS server (the same as exporting service component certificate, switching the transfer protocol, and setting storage on SYS server).

### **24.3 Why can't I use the API of the new function after upgrading the platform?**

#### **Question**

Why can't I use the API of the new function after upgrading the platform?

#### **Answer**

After the platform upgraded, the back-end structure is changed, so you should import a new API to the ZIP file of OpenAPI.


### **24.4 Can my database use Rose hot spare in the dual-server deployment mode?**

#### **Question**

Can my database use Rose hot spare in the dual-server deployment mode?

#### **Answer**

No. In the dual-server deployment mode, using Rose hot spare in third-party database is not supported. So you should configure Rose hot spare by yourself.

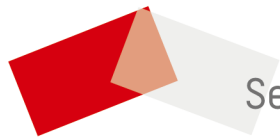

See Far, Go Further