



HikCentral Professional

Quick Start Guide

Contents

Chapter 1 Guide Content	1
Chapter 2 Administrator Rights	2
Chapter 3 System Requirements	3
3.1 System Requirements for Servers	3
3.2 System Requirements for Control Client	3
Chapter 4 Installation	5
4.1 Install Module	5
4.1.1 Install Service Module in Custom Mode	6
4.1.2 Install Service Module in Typical Mode	7
4.2 Install Control Client	7
4.3 Upgrade Client	8
4.4 Service Manager	8
Chapter 5 Login	11
5.1 Recommended Running Environment	11
5.2 Login for First Time for admin User	11
5.3 Login for First Time for Employee	12
Chapter 6 License Management	13
6.1 Activate License - Online	13
6.2 Update License - Online	15

Chapter 1 Guide Content

This guide briefly explains how to install your HikCentral Professional as well as how to configure some of its basic features.

To ensure the properness of usage and stability of the HikCentral Professional, please refer to the contents below and read the guide carefully before installation and operation.

Chapter 2 Administrator Rights

When you install and run the service modules, it is important that you have administrator rights on the PCs or servers that should run these components. Otherwise, you cannot install and configure the platform.

Consult your IT system administrator if in doubt about your rights.

If you access the platform via HikCentral Professional, you can log in to the **operating system** with the following default administrator user name and password at the first boot.

- Default User Name: **Administrator**
- Default Password: **Abc12345**

It is recommended that you change the default administrator password immediately after entering the platform for data security.



We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Chapter 3 System Requirements

3.1 System Requirements for Servers

Operating System

Microsoft® Windows 11 (64-bit), Microsoft® Windows 10 (64-bit), Windows 8.1 (64-bit), Windows 7 SP1 (64-bit); Windows Server 2019 (64-bit), Windows Server 2016 (64-bit), Windows Server 2012 R2 (64-bit), Windows Server 2008 R2 SP1 (64-bit)



For Windows 8.1 and Windows Server 2012 R2, make sure it is installed with the rollup (KB2919355) undated in April, 2014.

CPU

Intel® Core™ I3 and above

Memory

4 GB and above

HDD

SATA-II 7200 RPM Enterprise Class disk with 650 GB storage capacity. When running the SYS, there should be at least 1 GB free space.

3.2 System Requirements for Control Client

Operating System

Microsoft® Windows 11 (64-bit), Microsoft® Windows 10 (64-bit), Windows 8.1 (64-bit), Windows 7 SP1 (64-bit); Windows Server 2019 (64-bit), Windows Server 2016 (64-bit), Windows Server 2012 R2 (64-bit), Windows Server 2008 R2 SP1 (64-bit), Mac OS



For Windows 8.1 and Windows Server 2012 R2, make sure it is installed with the rollup (KB2919355) undated in April, 2014.

CPU

Intel® Core™ I5 and above

Memory

4 GB and above

Graphics Card

NVIDIA® Geforce GTX 970 and above

HDD

When running the Control Client, there should be at least 1 GB free space.

Chapter 4 Installation

Install the service modules on your servers or PCs to build your HikCentral Professional.

Multiple installation packages are provided on the Hikvision's official website (<https://hikvision.com>) and Partner Portal (<https://tpp.hikvision.com>) for building your system.

Basic Installation Package

On the Hikvision's official website, this package is named as "HikCentral Professional.exe". It contains all the modules to build the system, including System Management Service, Streaming Service, Control Client, and Database Service.



The System Management Service and Streaming Service cannot be installed on the same PC.

Control Client Installation Package

On the Hikvision's official website, four packages are provided to meet the requirement of different operating systems, including "HikCentral Professional Control Client x64.exe", "HikCentral Professional Control Client x86.exe", "HikCentral Professional Control Client x64.msi", and "HikCentral Professional Control Client x86.msi". This kind of package contains the Control Client module only.

pStor Installation Package

On the Hikvision's official website, this package is named as "pStor.exe". It contains a module to build the storage access service used for managing local HDDs and logical disks.

SAC Installation Package

On the Hikvision's official website, this package is named as "HikCentral Professional SAC Installer.exe". It contains a module to build the pStor cluster service for storage.

Language Installation Package

On the Hikvision's official website, this package is named as "HikCentral Professional LanguagePack.exe". It contains modules to display the system in different languages.

OpenAPI Installation Package

On the Partner Portal, this package is named as "HikCentralPro OpenAPI". It provides multiple APIs for third-party systems to fast integrate different applications .

4.1 Install Module

Two installation methods are available for building the modules.

Typical Mode

Install all the service modules (except the Streaming Service) and client.


Custom Mode

Select the installation directory and modules to be installed as desired.

4.1.1 Install Service Module in Custom Mode

During installation in custom mode, you can select the installation directory and install the specified service modules as desired.

Steps

1. Double-click  (HikCentral Professional) to enter the Welcome panel of the InstallShield Wizard.
2. Click **I agree to the terms in License Agreement** and read the License Agreement.
3. Select **Custom Installation** as setup type.
4. Select the module(s) you want to install and click **Next**.

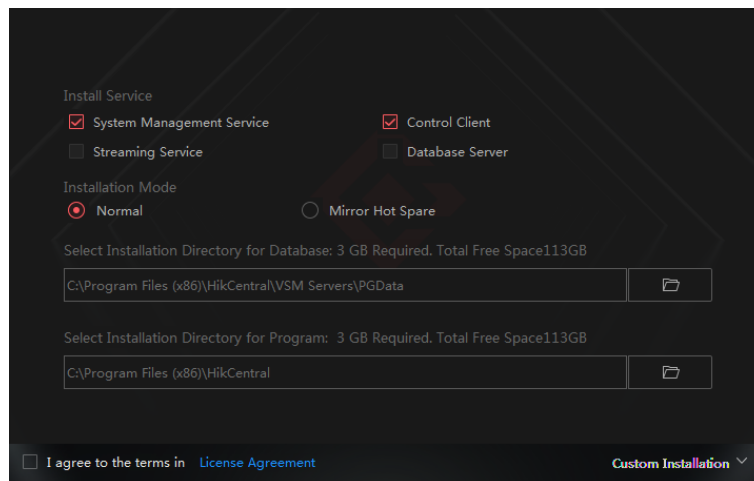


Figure 4-1 Select Modules to Install

Note

The System Management Service and Streaming Service cannot be installed on the same PC.

In this way, you can install the service and client modules to different PCs or servers as desired.

5. **Optional:** Select the installation mode.

- Select **Normal** if you do not need to build a hot spare system.
- Select **Mirror Hot Spare** to build a mirror hot spare system. There are two HikCentral servers in the hot spare system: host server and spare server. When the host server works, the data in host server is copied to the spare server in real time. When the host server fails, the spare server switches into operation without interruption, thus increasing the reliability of the system.

Note


For building the hot spare system, contact our technical support engineer.

- 6. Optional:** Change the default directory as desired to install the program module(s) and the database.
7. Click **Custom Installation** again to return to the Welcome panel.
8. Click **Install Now** to begin the installation.
A panel indicating progress of the installation will display.
9. Click **Finish** to complete the installation.

4.1.2 Install Service Module in Typical Mode

You can install all the service modules (except the Streaming Service) and client on one PC or server.

Steps

1. Double-click  (HikCentral Professional) to enter the welcome panel of the InstallShield Wizard.
2. Click **I agree to the terms in License Agreement** and read the License Agreement.
3. Click **Install Now** to begin the installation.
A panel indicating progress of the installation will display.
4. Click **Finish** to complete the installation.

4.2 Install Control Client


You must install HikCentral Professional Control Client on your computer before you can access the system via Control Client. You can get the installation package from Hikvision's official site, or download from HikCentral Professional Web Client's Home page (64-bit).

Steps



Note

We provide an installation package of Control Client in MSI format. For scenario with Active Directory Domain Services (AD DS), you can install/upgrade the Control Clients on the PCs in the AD domain in a batch by Windows® Group Policy. Click [here](#) to visit the official site of Microsoft® and you can view details and instructions about Windows® Group Policy.

1. Double-click  (HikCentral Professional_Client) to enter the welcome panel of the InstallShield Wizard.
2. **Optional:** Select a proper directory on your computer to install the Control Client.
3. Click **Install Now** to begin the installation.
A panel indicating progress of the installation will display.
4. Click **Finish** to complete the installation.


4.3 Upgrade Client

The upgrade process has two phases: upgrade silently and upgrade the incremental data. During the first phase, you can still use the Client, and during the second phase, you will be not able to use the Client.

Steps

Note

You can get the installation package from Hikvision's official site, or download from the Home page of the Web Client (64-bit). We provide an installation package of Control Client in MSI format. For scenario with Active Directory Domain Services (AD DS), you can upgrade the Control Clients on the PCs in the AD domain in a batch by Windows® Group Policy. Please visit the official site of Microsoft® and you can view details and instructions about Windows® Group Policy.

1. Double-click  (HikCentral Professional_Client) to enter the welcome panel of the InstallShield Wizard.
 2. Click **Upgrade**.
A panel for confirming silent upgrade will display.
 3. Click **Yes** to upgrade silently.
-

Note

During upgrade, you can still use the Client, and the data generated before you confirm to upgrade incremental data will be synchronized to the database.

A panel indicating the upgrade process will display.

4. After the silent upgrade is finished, click **OK** to upgrade the incremental data.
-

Note

It is recommended to upgrade the incremental data as soon as possible. During upgrade, you will be not able to use the Client.

A panel indicating the upgrade progress will display.

5. Click **Finish** to finish the upgrade.
-

4.4 Service Manager

After successfully installing the service module(s), you can run the Service Manager and perform related operations of service, such as starting, stopping, or restarting the service.

Steps

1. Right-click  and select **Run as Administrator** to run the Service Manager.

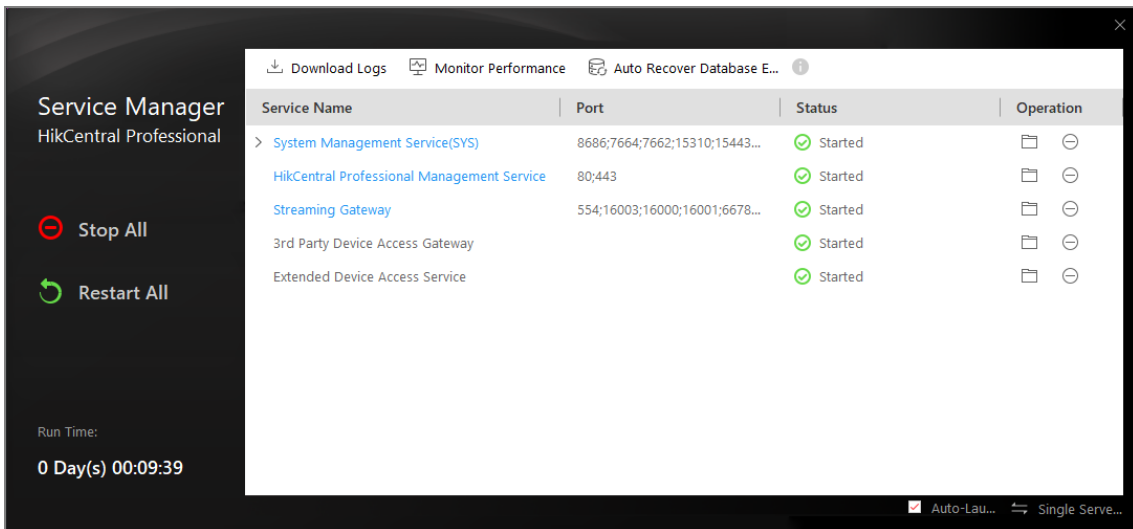


Figure 4-2 Service Manager Main Page

Note

The displayed items vary with the service modules you selected for installation.

2. Optional: Perform the following operation(s) after starting the Service Manager.

- Stop All** Click **Stop All** to stop all the services.
- Restart All** Click **Restart All** to run all the services again.
- Stop Specific Service** Select one service and click ⊖ to stop the service.
- Edit Service** Click the service name to edit the port of the service.

Note

If the port number of the service is occupied by other service, the port No. will be shown in red. You should change the port number to other value before the service can work properly.

- Open Service Location** Select one service and click 📁 to go to the installation directory of the service.

3. Optional: Click **Auto Recover Database Exception** to recover database exception caused by accidents such as power-off and unexpected reboot.

- 1) Enable **Auto Recover Database Exception**.

Note


The database service will restart after you enable this function.

- 2) Click 📁 to set the archive path for recovering the database.

 **Note**

- The remaining disk space of the archive path should be twice as the size of database data.
- The archive path should be under a path in English.

3) Click **OK** to finish setting.

4. **Optional:** Check **Auto-Launch** to enable launching the Service Manager automatically after the PC started up.
5. Click  **Dual-Server Deployment** to deploy the database on another server.

Chapter 5 Login

You can access and configure the platform via web browser directly, without installing any client software on the your computer.

Note

The login session of the Web Client will expire and a prompt with countdown will appear after the configured time period in which there is no action.

5.1 Recommended Running Environment

The following is recommended system requirement for running the Web Client.

CPU

Intel® Core™ I3 and above

Memory

4 GB and above

Web Browser

Internet Explorer® 11 and above, Firefox® 100 and above, Google Chrome® 100 and above, Safari® 13 and above, Microsoft® Edge 100 and above.

Note

Upgrading from V1.x to V2.x requires double available disk spaces than data stored in the database.

5.2 Login for First Time for admin User

By default, the platform predefined the administrator user named admin. When you login via the Web Client for the first time, you are required to create a password for the admin user before you can properly configure and operate the system.

Steps

1. In the address bar of the web browser, enter the address of the PC running SYS service and press **Enter** key.

Example

If the IP address of PC running SYS is 172.6.21.96, and you should enter `http://172.6.21.96` or `https://172.6.21.96` in the address bar.

2. Enter the password and confirm password for the admin user in the pop-up Create Password window.

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

3. Click OK.

The Home page of Web Client will be displayed after you successfully creating the admin password.

5.3 Login for First Time for Employee

Employees can log in to the Web Client by themselves.

Steps

- 1.** Open the Web Client.
 - 2.** Select the **Self-Service** tab.
 - 3.** Login with employee ID and password. The default password is the employee ID.
-

Note

Employees are required to change the default password upon the first login.

4. Click OK.

Result

The Web Client homepage displays after employees successfully log in to the system.

Chapter 6 License Management

After installing HikCentral Professional, you have a temporary License for a specified number of devices and limited functions. To ensure the proper use of HikCentral Professional, you can activate the SYS to access more functions and manage more devices. If you do not want to activate the SYS now, you can skip this chapter and activate the system later.

Two types of License are available for HikCentral Professional:

- **Base:** You need to purchase at least one basic License to activate the HikCentral Professional.
- **Expansion:** If you want to increase the capability of your system, you can purchase an expanded License to get additional features.



- Only the admin user can perform the activation, update, and deactivation operation.
 - If you encounter any problems during activation, update, and deactivation, please send the server logs to our technical support engineers.
-

6.1 Activate License - Online

If the SYS server to be activated can properly connect to the Internet, you can activate the SYS server in online mode.

Steps

1. Log in to HikCentral Professional via the Web Client.
2. On the Home page, click **Activate** to open the Activate License panel.
3. Click **Online Activation** to activate the License in online mode.

Activate License [X]

Activation Type

Online Activation
The SYS to be activated can connect to the Internet.

Offline Activation
The SYS to be activated cannot connect to the Internet.

Activation Code

+

I accept the term... [Hikvision Software User License Agreement](#)

Machine Environment Type

▾

Hot Spare

Activate Cancel

Figure 6-1 Activate License in Online Mode

4. Enter the activation code received when you purchased your License.

 **Note**

- If you have purchased more than one Licenses, you can click + and enter other activation codes.
 - The activation code should contain 16 characters or 32 characters (except dashes).
5. Check **I accept the terms of the agreement** to open the License Agreement panel and click **OK**.
 6. **Optional:** Select the machine environment type.
Physical Machine (Default)

A physical computer that contains hardware specifications and is used for running the SYS. If the hardware changed, the License will be invalid, and the SYS may not run normally.

AWS (Amazon Web Services)

A virtual machine that provides the cloud computing service for running the SYS.

Azure (Microsoft Azure)

A virtual machine that provides the cloud computing service for running the SYS.



If you select the machine environment type as the AWS or Azure, the pStor server, Streaming Server, and other external servers can not access the platform. And the Rose hot spare system is also not supported.

- 7. Optional:** Check the **Hot Spare**, select type, and enter the IP address if you want to build a hot spare system.
-



- You must select Hot Spare mode when you install the system.
 - For how to build the hot spare system, please contact our technical support engineers.
-

- 8. Click **Activate**.**

The email settings pane will appear after activating the License.

- 9. Enter an email address for the admin user.**
-



This email is used to receive the License activation code when the admin user forgets the password for logging in to the platform and the activation code at the same time.

- 10. Set the email server parameters.**
 - 11. Click **OK** to save the email settings.**
-


6.2 Update License - Online

As your project grows, you may need to increase the connectable number of resources (e.g., devices) for your HikCentral Professional. If the SYS to be updated can properly connect to the Internet, you can update the License in online mode.

Before You Start

Contact your dealer or our sales team to purchase a License for additional features.

Steps


1. Log in to HikCentral Professional via the Web Client. Refer to [***Login for First Time for admin User***](#) for details.
 2. On the top, move the cursor to  **Maintenance and Management** to show the drop-down menu.
 3. Click **Update License** in the drop-down menu to open the Update License pane.
-

4. Click **Online Update** to update the License in online mode.
5. Enter the activation code received when you purchase your License.



Note

- If you have purchased more than one Licenses, you can click + and enter other activation codes.
 - The activation code should contain 32 characters (except dashes).
-
6. Check **I accept the terms of the agreement** to open the License Agreement panel and click **OK**.
 7. Click **Update**.

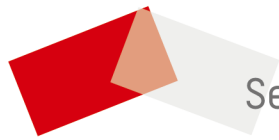

See Far, Go Further